

SmartPOWER PC User Manual



**ADDRESS: İkitelli OSB Mah. Cevre
14. Blok Sok. Telas Blok Dis Kapi
No: 1 Kat: 1-2 Basaksehir/Istanbul**



**Phone: +90 212 438 80 24
Fax: +90 212 438 80 25**

info@gruparge.com



1. The RS-485 outputs of the device to be measured are connected to the USB-RS-485 converter and plugs into the computer's USB port. Checked from device manager.



2. The port opened by the connected RS-485 converter on the computer is selected with the "New" button at the top left.

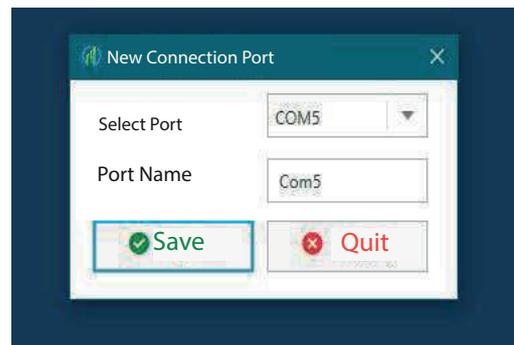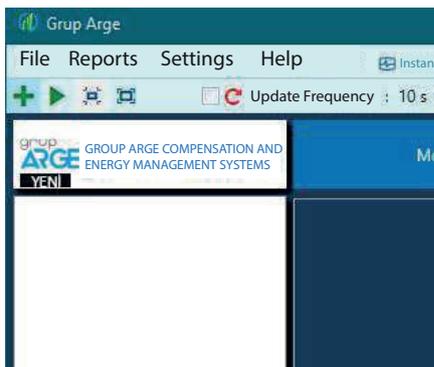

3. Right click on the added port, with "New Device", device information are filled.

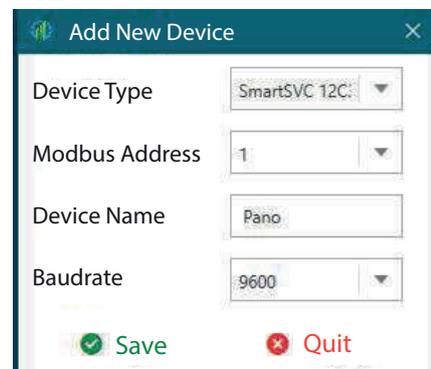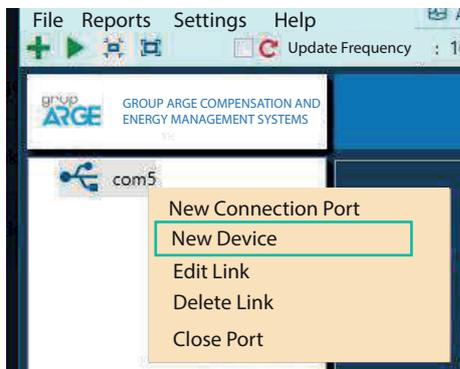

4. The software will start automatic measurements after a while. By clicking on the device on the left, device-specific tabs and measured data can be viewed.



5. When the device is selected consumption data can be seen from the Reports menu . Time Range should be selected in the window that opens.

