

RKRC 07/12/18

User Manual



ADDRESS: Ikitelli OSB Mah. Cevre
14. Blok Sok. Telas Blok Dis Kapi
No: 1 Kat: 1-2 Basaksehir/Istanbul

Phone: +90 212 438 80 24
Fax: +90 212 438 80 25

info@gruparge.com

CONTENTS

CONTENTS	2
PROPER USE and SAFETY REQUIREMENTS	8
1. INTRODUCTION	9
1.1. GENERAL FEATURES	9
1.2. MECHANICAL DESIGN FEATURES	9
1.3. ELECTRICAL FEATURES	10
1.4. SETUP AND OPERATION FEATURES	10
1.5. STEPS AND LEARNING FEATURES	10
1.6. COMPENSATION FEATURES	11
1.7. PROTECTION AND RECOVERY FEATURES	12
1.8. SMART DIAGNOSIS AND CORRECTION FEATURES	12
1.9. EVENT / WARNING / FAULT LOGS	12
1.10. ANALYSIS AND HARMONIC MEASUREMENT FEATURES	13
1.11. DISPLAY AND USABILITY FEATURES	13
1.12. ACCESS AND SECURITY FEATURES	14
1.13. COMMUNICATION FEATURES	14
1.14. OTHER FEATURES	14
1.15. MEASURED AND DISPLAYED LINE PARAMETERS	15
1.16. RKRC PFC TECHNICAL DRAWING	15
1.17. CONNECTION DIAGRAM	15
1.18. SCREEN AND BUTTONS	16
1.18.1. Screen Sections	16
1.18.1.1. Step Information Bar	16
1.18.1.2. Header Information Bar	17
1.18.1.3. Status Information Bar	17
1.18.1.4. Button Information Bar	17
2. QUICK SETUP	18
2.1. DEVICE SETUP	18
3. MAIN SCREENS AND SUB-SCREENS	18
3.1. MAIN SCREEN OVERVIEW	18
3.2. MAIN VALUES	18
3.2.1. Instantaneous Line Values	19
3.2.2. Compensation Status	19
3.2.3. Reactive to Active Ratios	19
3.3. VOLTAGE / CURRENT (RMS)	20
3.3.1. Phase-to-Phase Voltages / Frequency	20
3.3.2. Voltage / Current Angle and Asymmetry	20
3.3.3. Voltage / Current Min-Max (Import)	21
3.3.4. Voltage / Current Min-Max (Export)	21
3.3.5. Voltage / Current Demand (Import)	21
3.3.6. Voltage / Current Demand (Export)	22

3.4. ACTIVE AND REACTIVE POWERS.....	22
3.4.1. Power Triangle Graph.....	22
3.4.2. Apparent / Active / Reactive Powers.....	24
3.4.3. Active / Reactive Min-Max (Import).....	24
3.4.4. Active / Reactive Min-Max (Export).....	24
3.4.5. Active / Reactive Demand (Import).....	25
3.4.6. Active / Reactive Demand (Export).....	25
3.5. PHASOR DIAGRAM AND ANGLES.....	25
3.5.1. Power Quality.....	26
3.6. IMPORT ENERGIES.....	26
3.6.1. Export Energies.....	26
3.6.2. All Energies.....	27
3.6.3. Energy Ratios (Import).....	27
3.6.4. Energy Ratios (Export).....	27
3.7. VOLTAGE / CURRENT (%) HARMONICS.....	28
3.8. VOLTAGE (RMS) HARMONICS.....	28
3.9. CURRENT (RMS) HARMONICS.....	28
3.10. VOLTAGE HARMONIC GRAPH.....	29
3.11. CURRENT HARMONIC GRAPH.....	29
3.12. RPP Table (Reactive Power Profile).....	30
3.13. WARNING LOG.....	30
3.13.1. Event Log.....	30
3.14. STEPS (Nominal / kVAr)	31
3.14.1. Step Usage Details.....	31
4. RKRC PFC MAIN MENU.....	32
4.1. QUICK MENU.....	32
4.1.1. Steps	32
4.1.1.1. Step Learning.....	32
4.1.1.2. Control and Clear Details.....	32
4.1.1.3. Step Common Control.....	32
4.1.1.4. Clear Notifications	32
4.1.2. Response Times.....	32
4.1.3. Modbus Address.....	32
4.1.4. Internet Guide	32
4.1.5. Date & Time.....	32
4.1.6. Language.....	32
4.1.7. Start Setup / Assistant.....	33
4.2. STEPS AND SETTINGS.....	33
4.2.1. Step Powers and Manual Entry.....	33
4.2.2. Step Learning.....	33
4.2.2.1. All Steps.....	33
4.2.2.1.1. Smart.....	33
4.2.2.1.2. Regular.....	33

4.2.2.1.3. Fast.....	33
4.2.2.2. Single Step Learning.....	33
4.2.2.3. Group 1 (Steps 1-7).....	33
4.2.2.4. Group 2 (Steps 8-12).....	33
4.2.2.5. Group 3 (Steps 13-18).....	33
4.2.2.6. Pending Steps	33
4.2.3. Control and Clear Details.....	33
4.2.4. Settings.....	34
4.2.4.1. Discharge Time.....	34
4.2.4.1.1 Discharge Time for All.....	34
4.2.4.1.2 Discharge Time (Steps 1-7).....	34
4.2.4.1.3 Discharge Time (Steps 8-12).....	34
4.2.4.1.4 Discharge Time (Steps 13-18).....	34
4.2.4.2. Equal Aging.....	34
4.2.4.2.1 Control.....	34
4.2.4.2.2 Equivalent Percentage.....	34
4.2.4.2.3 Operating Time Difference.....	34
4.2.4.3. Auto Control.....	34
4.2.4.4. Delay Time between Steps	34
4.2.4.4.1 Delay for All.....	34
4.2.4.4.2 Delay (Steps 1-7).....	34
4.2.4.4.3 Delay (Steps 8-12).....	34
4.2.4.4.4 Delay (Steps 13-18).....	34
4.2.4.5. Advanced Settings.....	34
4.2.4.5.1. Reset All Details.....	34
4.2.4.5.2. Learning Measurement Error.....	34
4.2.4.5.3. Imbalance Percentage.....	34
4.2.4.5.4. Depreciation Percentage.....	34
4.2.5. Step Common Control.....	34
4.2.5.1. Step Common Control.....	34
4.2.5.2. Step Common 1.....	35
4.2.5.3. Step Common 2.....	35
4.2.5.4. Step Common 3.....	35
4.2.6. Clear Notifications.....	35
4.3. COMPENSATION.....	35
4.3.1. Reactive Limits.....	35
4.3.1.1. Inductive Limit.....	35
4.3.1.2. Capacitive Limit.....	35
4.3.2. Response Times.....	35
4.3.2.1. Inductive.....	35
4.3.2.2. Capacitive.....	35
4.3.2.3. Normal.....	35
4.3.3. Unmetered Power.....	35
4.3.3.1. Unmetered Power 3-Phase.....	36
4.3.3.2. Operating Time.....	36
4.3.3.3. Unmetered Power L1	36

4.3.3.4. Unmetered Power L2.....	36
4.3.3.5. Unmetered Power L3.....	36
4.3.4. Target Cos / Tan.....	36
4.3.4.1. Target Cos / Tan.....	36
4.3.4.2. Operating Time.....	36
4.3.5. Generator.....	36
4.3.5.1. Compensation with Generator.....	36
4.3.5.2. Target Cos / Tan (Generator).....	36
4.3.6. Export Compensation.....	36
4.3.7. PROTECTION.....	36
4.3.7.1. Over Voltage.....	36
4.3.7.2. Under Voltage.....	36
4.3.7.3 Over Harmonics.....	36
4.3.7.4 Over Temperature.....	36
4.3.7.5. Set Values.....	36
4.3.8. HYSTERESIS.....	36
4.3.8.1. Inductive.....	36
4.3.8.2. Capacitive.....	37
4.3.8.3. Normal.....	37
4.4. DEVICE SETTINGS.....	37
4.4.1. Measurement and Transformers.....	37
4.4.1.1. Current Transformer Ratio.....	37
4.4.1.2. Current-Voltage Pairs.....	37
4.4.1.3. Current Transformer Directions.....	37
4.4.1.4. Voltage Transformers.....	37
4.4.1.4.1. Line Voltage.....	37
4.4.1.4.2. Measurement Voltage.....	37
4.4.2. Modbus Configuration.....	37
4.4.2.1. Modbus Address.....	37
4.4.2.2. Modbus Speed (bps).....	37
4.4.2.3. Data, Stop Bits and Parity.....	37
4.4.2.3.1. Data Bits.....	37
4.4.2.3.2. Parity Setting.....	37
4.4.2.3.3. Stop Bits.....	38
4.4.2.4. Silent Interval (xBit).....	38
4.4.2.5. Mode.....	38
4.4.2.6. Modbus Protection.....	38
4.4.2.6.1. Read Protection.....	38
4.4.2.6.2. Write Protection.....	38
4.4.2.6.3. Read Password.....	38
4.4.2.6.4. Write Password.....	38
4.4.3. Display Settings.....	38
4.4.3.1. Average.....	38
4.4.3.1.1. Sample Count.....	38
4.4.3.1.2. Refresh Interval.....	38
4.4.3.1.3. Control Percentage.....	38
4.4.3.2. Password Protection.....	38
4.4.3.3. Access Level.....	38
4.4.3.4. Hide Device Messages.....	38

4.4.3.5. Screen Saver.....	38
4.4.3.6. Screen Timeout.....	38
4.4.3.7. Brightness Level.....	38
4.4.4. Advanced Settings.....	39
4.4.4.1. Power Off / On.....	39
4.4.4.2. Default Settings.....	39
4.4.4.3. Device Reset.....	39
4.4.4.4. Measurement Period.....	39
4.4.5. Device Information.....	39
4.4.5.1. Serial Number.....	39
4.4.5.2. Software Version.....	39
4.4.5.3. Build Date and Time.....	39
4.4.5.4. Hardware Version.....	39
4.4.5.5. Date & Time.....	39
4.4.5.6. Language / Dil.....	39
4.4.5.7. Working Hours.....	39
4.4.5.8. Periodic Maintenance Time.....	39
4.5. ANALYZER.....	40
4.5.1. Energy.....	40
4.5.2. Peak Values.....	40
4.5.3. Demands.....	40
4.5.3.1. Clear / Reset.....	40
4.5.3.2. Demand Period.....	40
4.5.4. Harmonics.....	40
4.5.5. Reactive Power Profile (RPP).....	41
4.5.5.1. Clear / Reset.....	41
4.5.5.2. Power Resolution.....	41
4.5.5.3. Maximum Difference (%).....	41
4.5.5.4. Difference Percentage.....	41
4.6. WARNING AND EVENT LOGS.....	41
4.6.1. Clear Event Log.....	41
4.6.2. Clear Warning Log.....	41
4.6.3. Set Values.....	41
4.6.3.1. Over Voltage.....	41
4.6.3.2. Under Voltage.....	41
4.6.3.3. Over Harmonics.....	41
4.6.3.4. Over Temperature.....	42
4.6.3.5. Weak Line Percentage.....	42
4.6.4. Fault Log.....	42
4.6.5. Permanent Warning LED.....	42
4.7. SETUP.....	42
4.7.1. Start Setup / Assistant.....	42
4.7.2. Settings.....	42
4.7.2.1. Setup Mode.....	42
4.7.2.2. Network Frequency.....	42

4.7.2.3. C.T. Connection Type.....	42
4.7.2.4. Current-Voltage Matching.....	42
4.7.2.5. Auto Control.....	42
4.7.2.6. Recovery for Measurements.....	42
4.7.2.7. Advanced Settings.....	43
4.7.2.7.1. Try Count.....	43
4.7.2.7.2. Error at Setup.....	43
4.7.2.7.3. Phase-to-Phase Control.....	43
4.7.2.7.4. C.T. Special Ratio L1.....	43
4.7.2.7.5. C.T. Special Ratio L2.....	43
4.7.2.7.6. C.T. Special Ratio L3.....	43
4.7.3. Ignore the First Setup.....	43

PROPER USE AND SAFETY REQUIREMENTS



Cut all the power when connecting and disconnecting the device to a panel.



Do not clean the device with a solvent or similar material. Only use a dry cloth.



Please do not intervene to the device when a technical problem is encountered and get in contact with a technical service within the shortest time.



If the warnings are not taken into account, our company or the authorized dealer shall not be held responsible for the negative consequences.



Do not dispose in the trash, the device must be delivered to the collection centers (electronic device recycling centers). It should be recycled or disposed of without harming human health and environment.



The installation, assembly, activation and operation of the device should be done and used by only expert professionals and in accordance with safety regulations and instructions.



The device operates with current transformers. Do not strictly leave current transformer tips unattached. Dangerous high voltage can occur.

1. INTRODUCTION

1.1 GENERAL FEATURES

The RKRC PFC (Power Factor Controller) measures the voltages and currents of three phases, calculates the reactive power drawn by operating loads and provides a effective response through its conventional capacitor and reactor steps it automatically learns. It is a new generation advanced Power Factor Controller (PFC).

Additionally, the RKRC PFC measures and displays parameters such as phase currents, phase-to-neutral and phase-to-phase voltages, frequencies, active and reactive powers, harmonics and phase angle differences between current and voltage. It also offers monitoring capabilities through its communication interface. Furthermore, it measures and records active and reactive energies for both import and export.

The PFC records demand and peak values for these measured line parameters, which can be viewed directly on the device.

Many necessary adjustments related to the device (Current Transformer Ratio, Measurement and Line Voltages, Compensation Parameters, etc.) can be made either through individual menus or collectively via the "Assistant" section.

Thanks to its communication capability, all read parameters can be remotely monitored via standard MODBUS protocols and various adjustments can be performed.

Alarms can be generated through various set values configured in the device menu. The compensation process can enable or disable measurement recovery features for protection against disconnections and connection losses.

1.2 MECHANICAL DESIGN FEATURES

- Slim ergonomic design with a depth of 48 mm, allowing for compact panel design.
- Terminal structure positioned for easy cable mounting.
- Safe C.T. secondary connection with fixed current terminal input, enabling the use of 4 mm² cables to prevent power loss over long distances.
- Options with +07, +12, +18 steps.
- Differentiated terminal structures for 7, 5 and 6-step groups to prevent interchangeability.
- Terminal numbers grouped according to the functions of input and output terminals.
- Design suitable for easy field setup.
- When panel modifications are necessary:
 - The existing RKRC PFC mounted on the front panel, along with its voltage, step, generator and communication terminals, can be detached. However, the current transformer secondary connections remain attached to the PFC to prevent them from being left disconnected.
 - The PFC with removed mounting brackets can be taken out by pulling it forward from the metal panel and rotated sideways for removal.
 - The new PFC is installed on the panel cover. The current transformer secondary connections are detached from the existing PFC one by one and quickly connected to the fixed current inputs of the newly installed RKRC PFC.
- Once the other terminals are connected to the PFC and power is supplied, the setup process can begin.

1.3 ELECTRICAL FEATURES

- Current measurement precision of 0.5 mA.
- Current measurement range of 0.5 mA to 6.5 A.
- Voltage measurement range of 5 - 300 VAC (Phase-Neutral).
- Safe operation within a supply voltage range of 70 - 300 VAC (Phase-Neutral).
- Compatibility with 50 Hz / 60 Hz networks.
- The presence of any Phase-Neutral voltage is sufficient to supply power and operate the PFC.
- Hardware safety against incorrect Phase-Phase connections to Phase-Neutral inputs.
- Detection and warning for incorrect Phase-Neutral connections.
- 5 A relay in step contactor control outputs.

1.4. SETUP AND OPERATION FEATURES

- Quick Setup with only the Current Transformer Ratio input.
- Easy Configuration through the Setup Assistant.
- Ability to setup with three-phase and single-phase steps.
- Option to configure with capacitor or reactor steps.
- Automatic pairing for current and voltage inputs.
- Option to disable the automatic current - voltage pairing feature.
- Automatic current direction correction for each phase.
- Detection and warning messages for various incorrect connections and unsuitable conditions, including:
 - Voltage inputs, step commons, generator inputs and current transformers.
 - Both capacitors and shunt reactors connected to step outputs during setup.
 - Secondary outputs of current transformers being connected in series to form a loop.
 - The same phase connected to multiple voltage inputs.
 - Broken secondary connections of current transformers.
- Option to configure using a single current transformer by specifying any phase.
- Automatic current-voltage pairing capability when three-phase voltage is connected while using a single current transformer.
- If the PFC is reset and forgotten in the panel, it will observe line stability after one hour, automatically complete the setup and step learning and start compensation as a safeguard.
- In case of connection changes to the current transformers after setup, the PFC detects the error of secondary outputs being connected in series to form a loop, automatically switches to single current transformer setup and continues compensation under these conditions.
- Detection and warning for one or all of the three current transformers having different transformation ratios.
- Ability to perform accurate measurement and proper compensation by configuring specific CT Ratio parameters for each current transformer when different transformation ratios are used for any reason.

1.5. STEPS AND LEARNING FEATURES

- Ability to freely connect capacitors or reactors to any step.
- Smart step learning algorithm that monitors line stability before activation/deactivation steps.
- Monitoring line stability to initiate all automatic step learning processes.
- Option to learn all steps from a single menu.
- Option to learn a specific single step.
- Option to learn Block/Group steps (1-7, 8-12, 13-18).
- Adaptive mode options for smart/regular/fast step learning for all learning modes.

- Ability to automatically initiate learning for unlearned steps by observing operational stability after sensitivity loss due to load changes.
- Option to learn Block/Group steps (1-7, 8-12, 13-18).
Adaptive mode options for smart/regular/fast step learning for all learning modes.
- Ability to automatically initiate learning for unlearned steps by observing operational stability after sensitivity loss due to load changes.
- Step learning performance with 1.5-2 seconds accuracy within a 3% margin of error.
- Capability to learn three-phase, dual-phase and single-phase capacitors and reactors.
- Rapid learning by monitoring common step voltages and learning only appropriate step groups.
- Automatic learning for step groups added later.
- Termination of ongoing learning processes when the generator is activated or voltage/current connections are interrupted, triggering PFC protection.
- Warning messages and rejection of user requests to learn steps under conditions that may cause incorrect values or cancellations.
- Preservation of current step values without canceling them under recovery and protection conditions or in case of current transformer connection failure.
- User-friendly manual step value entry screen.
- Differentiation of capacitors (red) and reactors (blue) with colored numbers in the Step Information Bar.
- Indication of phase allocation for steps in the Step Information Bar.
- Highlighting of manually entered steps in the Step Information Bar with an underline.
- Display of the specific phase with issues for faulty/imbalanced steps in the Step Information Bar.
- Notification of modified, canceled or newly added steps with different background colors after automatic or user-initiated learning.
- Warning records and visual indications of faulty steps with excessive phase imbalance after learning.
- Removal of manually entered steps from manual mode during learning if sensitivity conditions are met.
- Equal aging feature and settings for steps.
- Colored manual control for all steps.
- Grouped step commons with AC and DC type supply control features, parameter settings and warning messages.
- Detailed display of step powers, statuses, activation/deactivation counts and usage durations, grouped by step.
- Measurement of step common voltage levels and display on the related group page with different colors.
- Differentiated discharge times for each step groups.
- Differentiated inter-step delay times for each step groups.

1.6. COMPENSATION FEATURES

- Advanced intelligent compensation response algorithm.
- Ability to perform hybrid compensation with three-phase capacitors/reactors and single-phase capacitors/shunt reactors.
- Different response times for inductive, capacitive and normal (low reactive) ranges based on the entered limit values.
- Ability to perform bidirectional compensation for both import and export.
- Option to disable compensation during export.
- Ability to perform compensation using a single current transformer by selecting any current phase.
- Adjustable target Cos (ϕ) setting with optional duration and warning messages.

- Option to disable compensation using the generator control input.
- Safe compensation capability during generator operation with a different target Cos (ϕ) setting.
- High-precision, balanced three-phase unmetered power input (100 VAr sensitivity) which can be set as temporary or permanent to address inductive effects of high-voltage transformers, capacitive effects of long cables, etc.
- Permanent unmetered power input with 1 VAr sensitivity per phase to eliminate imbalances and calibration differences between meter and PFC measurements.
- Warning messages for insufficient capacitors and insufficient shunt reactors during compensation.

1.7. PROTECTION AND RECOVERY FEATURES

- Ability to detect disconnections in voltage and current inputs for phases during compensation and maintain compensation based on the average values of the remaining operational phases.
- Detection of transmission errors in current transformer connections over time and issuance of warning messages.
- Detection of total disconnection of all current transformer secondary outputs, deactivation of steps to avoid capacitive penalty risks and issuance of warning messages.
- Protection settings and options to disable compensation in cases of:
- Over Voltage, Over harmonic levels, Over panel temperature.

1.8. SMART DIAGNOSIS AND CORRECTION FEATURES

- Automatic step learning initiated by monitoring operational stability to diagnose faulty steps and ensure effective compensation during operation.
- Ability to detect connection errors caused by changes in voltage and current input connections after the initial setup and direct the system to automatic setup, ensuring accurate compensation upon completion.
- Detection of phase sequence changes and redirection to automatic setup.
- During subsequent setups after the initial setup and step learning, the ability to diagnose newly added, modified or canceled steps and redirect to automatic step learning.
- Safe compensation through detection of connection and step errors, redirection to automatic setup and step learning when the PFC is moved to another panel without being reset.
- Detection of step sticking and malfunctions with warning messages.
- Detection of step contactor coil faults and warning messages.
- Detection of missing fuses for step commons and warning messages.
- Safe shutdown by early detection of power outages to prevent data loss.
- Detection of short-term power outages with corresponding warning messages.

1.9. EVENT / WARNING / FAULT LOGS

- Comprehensive event/warning/fault logs with timestamped records and clear messages.
- List of the first and last occurrences of event/warning/fault statuses, along with the number of repetitions in between.
- Ability to delete event, warning or fault logs individually.
- Warning messages and adjustable set values for voltage, harmonics and panel temperature.
- User-configurable warning and fault LEDs.
- Notification through flashing alarm LEDs whenever a warning or fault occurs.
- Display of related text messages in the Status Information Bar whenever a warning or event occurs.

1.10. ANALYSIS AND HARMONIC MEASUREMENT FEATURES

- Reactive Power Profile (RPP) Analysis sorted from largest to smallest based on energy/time/inductive/capacitive/ratio requirements for panel step arrangement.
- Indication of step insufficiency in power samples with different background colors.
- Tracking of the operational instantaneous reactive power sample with a differentiated background color in the RPP list.
- Measurement of harmonics up to the 63rd harmonic for current and voltage.
- Display of harmonics as percentages and RMS values.
- Graphical display of harmonics on both automatic and manual scales.
- THDU and THDI values applicable for each phase.
- Various angle values between voltage and current.
- Minimum and maximum peak values.
- Demand values and their settings.

1.11. DISPLAY AND USABILITY FEATURES

- 3.5-inch TFT color display with 320x480 resolution.
- A rich-content, visually efficient and fast-operating screen and menu design.
- Customizable customer/company/contact information (up to 40 characters) displayed both on the screen saver and the Status Information Bar, editable via remote monitoring.
- Smart Button Information Bar indicating the main or sub-screen transition when the corresponding button is pressed.
- Detailed warning and information messages displayed in pop-up screens.
- Summary information messages displayed in the Status Information Bar for monitoring setup, step learning, warnings, events and operating conditions.
- Status Information Bar background color changes based on exceeding inductive or capacitive limits.
- Easy-to-understand PFC statuses with colors and icons.
- Main values and detailed compensation screens.
- Display of voltage pairing channels and their correct voltage phase positions.
- Phasor Diagram Graph.
- Vector representation with a four-quadrant Power Triangle Graph for power.
- Step status screens.
- Phase-to-phase representation of the reactive powers drawn by the operation.
- Display of the total power of engaged steps on a phase-to-phase screen.
- Energy indexes compatible with meter codes.
- Separate Energy Indexes for generator operating conditions.
- Easy execution of various parameter adjustments and function calls through menus.
- Information screens showing device details such as serial number, software and hardware version.
- Device runtime display.
- Screen saver feature with adjustable activation timing.
- Adjustable sample count and percentage difference settings for average calculations of displayed values.
- "Setup Assistant" screen providing sequential configuration of parameters required for setup and compensation.

1.12. ACCESS AND SECURITY FEATURES

- Customizable password protection and a unique reset password for each PFC.
- Ability to enable or disable password protection.
- Default operation without password protection when the device is first powered on.
- Automatic lowering of the access level if no buttons are pressed for 5-6 minutes when password protection is active.
- Display of the current access level in the main menu header.
- Intelligent menu system offering three levels of secure and controlled access.
- Practical access to steps, step learning, step control, step information updates, setup, Modbus address, language changes and compensation cycle times via the Quick Menu section.
- Smart menu access feature enabling quick and practical access for setup and step learning when needed.
- Ability to set any "Main Screen" as the default screen by pressing the Menu button for an extended duration.
- Quick switching between the current screen and the Main Screen by pressing the Menu button for a shorter duration.

1.13. COMMUNICATION FEATURES

- Remote monitoring and block read/write capabilities via standard Modbus RTU and Modbus ASCII, with speeds up to 256 kbps.
- High-resolution Modbus data width with 32-bit parameters for line parameters and 64-bit indexes for energy data.
- Modbus protection options for both reading and writing.
- Safe remote shutdown and restart of the PFC via communication.
- Communication status LED.


1.14. OTHER FEATURES

- Real-time clock and calendar.
- Internet link displayed on the screen for the PFC user manual.
- Recording and display of device power-on and power-off times.
- Periodic maintenance time settings and warning messages.
- Approximate panel temperature measurement and warning.
- Measurement of the device's internal power supply voltage and corresponding warnings.
- Menu function for restoring factory settings collectively for some customized parameters.
- Safe device reset feature that sequentially deactivates engaged steps.


1.15. MEASURED AND DISPLAYED LINE PARAMETERS

- Phase-to-Phase (VLL) and Phase-to-Neutral (VLN) measurements for Voltage (V), Current (I), Frequency (F), Active Power (P), Reactive Power (Q), Apparent Power (S), Cos (ϕ), Power Factor (PF), Reactive/Active Power Ratio (Q/P), THDU, THDI and Asymmetry.
- RMS and Percentage values for harmonics up to the 63rd harmonic for both current and voltage (odd/even harmonics).
- Angle and asymmetry values for voltage and current.
- Active, Inductive/Capacitive energy indexes for both import and export.
- Active, Inductive/Capacitive energy indexes for generator operations.
- Accumulated and instantaneous inductive/capacitive (Q/P) percentage ratios for both import and export.
- Demand, minimum/maximum peak values for import and export.
- Total phase-to-phase power of engaged steps.
- Instantaneous phase-to-phase reactive loads drawn by the operation.
- Generator statuses.
- Approximate internal temperature of the panel.

1.16. RKRC PFC TECHNICAL DRAWING

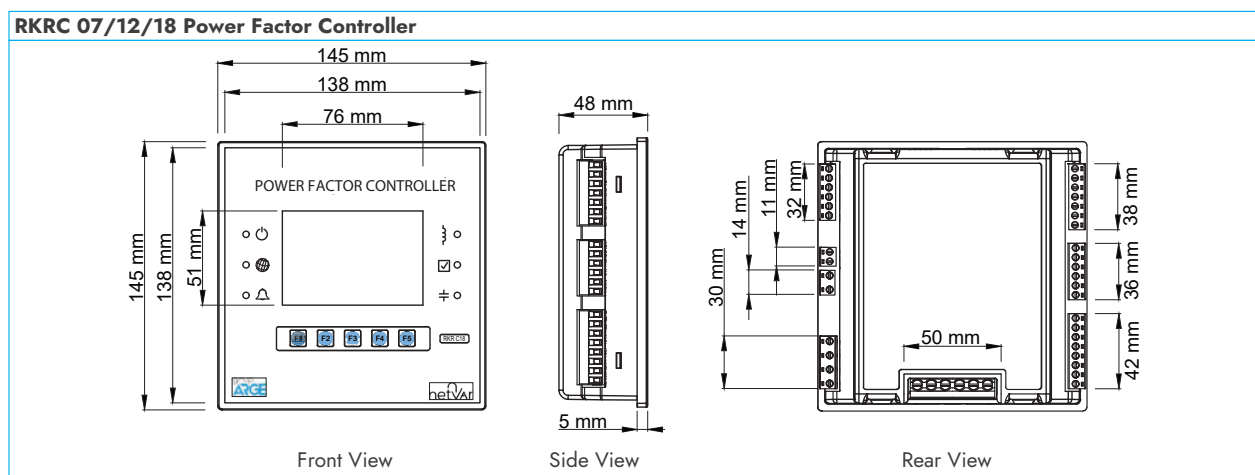

1.17. CONNECTION DIAGRAM

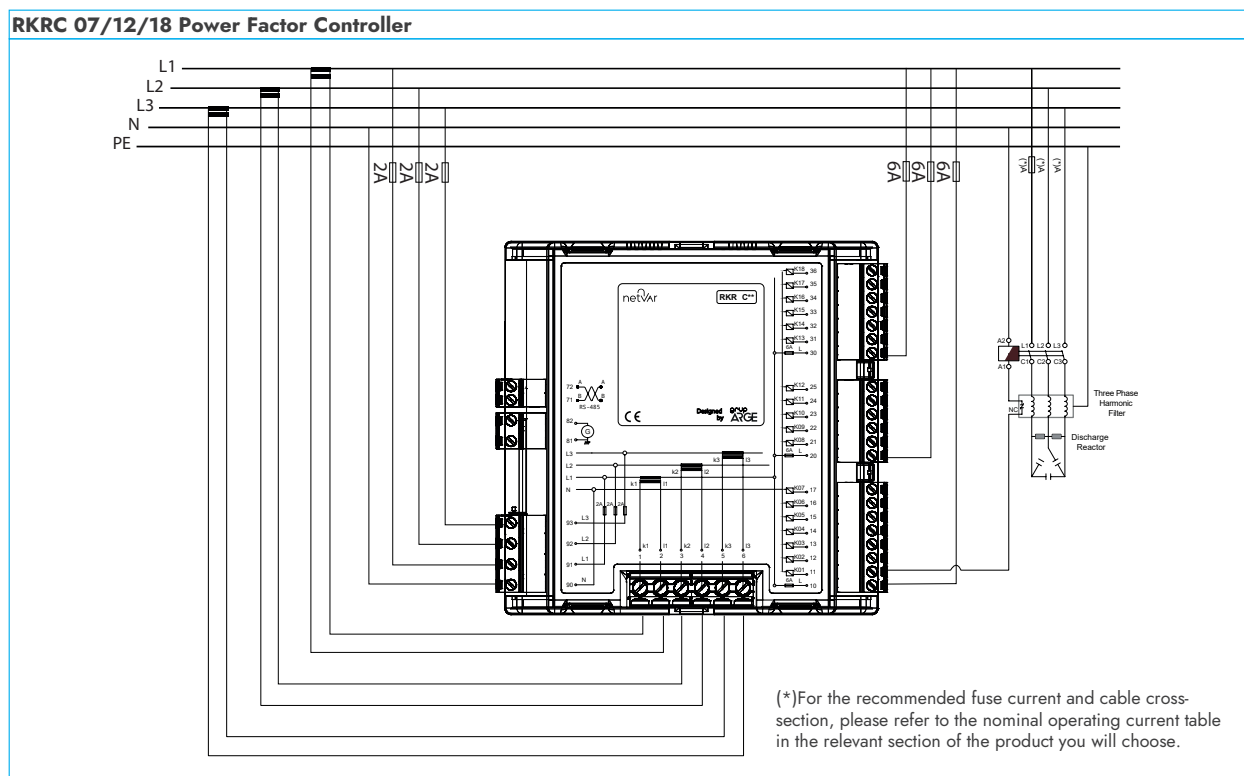

1.18. SCREEN AND BUTTONS

1.18.1. Screen Sections

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----

→ Step Information Bar

MAIN VALUES	19.1 °C
-------------	---------

→ Header Information Bar

	L1	L2	L3
Cos φ	1,000	1,000	1,000
Voltage	204,3 v	205,5 v	203,4 v
Current	1,440 A	0,898 A	0,765 A
RatiosΣ	⌋ 1,5 %	⊕ 0,7 %	

→ Value and Graphic Panel

SN:00000001	30/5 (6)	2024.07.11 08:58:49	📶
-------------	----------	---------------------	---

→ Status Information Bar

Ratios	Line Values	Steps	V-I	U-F	Menu
--------	-------------	-------	-----	-----	------

→ Button Information Bar

(RKRC 18)

1	2	3	4	5	6	7
MAIN VALUES						19.1 °C
L1			L2		L3	
Cos φ	1,000		1,000		1,000	
Voltage	204,3 v		205,5 v		203,4 v	
Current	1,440 A		0,898 A		0,765 A	
RatiosΣ	⌋ 1,5 %			⊕ 0,7 %		
SN:00000001		30/5 (6)		2024.07.11 08:58:49		📶
Ratios	Line Values		Steps	V-I	U-F	Menu

(RKRC 07)

<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div> <div>12</div>	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div> <div>11</div>	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div> <div>10</div>	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div> <div>9</div>	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div> <div>8</div>	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div> <div>7</div>	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div> <div>6</div>	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div> <div>5</div>	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div> <div>4</div>	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div> <div>3</div>	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div> <div>2</div>	<div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div> <div>1</div>
MAIN VALUES											19.1 °C
L1			L2			L3					
Cos φ	1,000			1,000			1,000				
Voltage	204,3 v			205,5 v			203,4 v				
Current	1,440 A			0,898 A			0,765 A				
RatiosΣ	⌋ 1,5 %			⊕ 0,7 %							
SN:00000001			30/5 (6)			2024.07.11 08:58:49					
Ratios		Line Values		Steps		V-I		U-F		Menu	

(RKRC 12)

1.18.1.1 Step Information Bar

This section displays all information and statuses of the compensation steps except for their power and statistical values. It is divided into four sub-sections: Group 1, Group 2, Group 3. The information and statuses of the steps can be easily understood based on background colors, the colors and numbers of phase bars and other visual indicators. Key details displayed include: Whether the steps are learned or not. Whether they are capacitors or reactors. Whether they are single-phase or three-phase. The phases on which they are positioned. Whether they are balanced or unbalanced. Whether they are active or passive. Whether they are discharging or ready. Whether their values have changed. Whether they are canceled, newly added or manually activated.

Additionally, during single-step learning, manual step entry or step control, the selected step can be tracked in this section.

1.18.1.2 Header Information Bar

This section displays the titles of the screens being navigated. Depending on the main page being shown, it also displays additional details such as temperature values, step common voltages.

1.18.1.3. Status Information Bar

This bar displays key information such as the device serial number, current transformer ratio, Modbus address, date and time. It also provides various notifications and warnings to the user. The background color of this bar changes based on the reactive index ratio: Blue if the inductive limit is exceeded. Red if the capacitive limit is exceeded. Green if the values are within the specified limits. Additionally, company/customer names entered via Modbus are displayed in this bar at regular intervals.

1.18.1.4. Button Information Bar

The device features 5 buttons and their functions are customized based on the menus and main screens being displayed. Buttons for navigating between main screens are labeled in yellow, while those for switching between sub-screens are labeled in white.

The far-right green button has three distinct functions:

1. Short press: Opens the device menu.
2. Long press (until the blue home icon appears): Provides quick access to the main measurement screen.
3. Very long press (until the red home icon appears): Sets the current main screen as the default custom screen.

If a custom default screen different from the main screen is set, holding the button again (until the blue home icon appears) allows quick switching between the main measurement screen and the custom screen.

When the buttons are pressed, directional arrow icons will appear in the Button Information Bar, assisting the user with navigation. If no buttons are pressed, the abbreviated titles of the screens accessible via the buttons will be displayed in their respective boxes, as shown below.



Short Press on the Menu Button: Opens the device's main menu. In the Menu: The buttons perform the functions shown in the illustration below.



The Exit Button allows the user to directly exit the menu. The Back Button returns the user to the previous main menu from the current menu screen.



2. QUICK SETUP

2.1. DEVICE SETUP

After the device connections are made in accordance with the connection diagram, the device is energized. When the device is energized after the phase and neutral connections are made correctly, it displays the serial number and brings the "Current Transformer Ratio (C.T)" parameter to the screen.

Here, the current transformer ratio is entered using the F3 and F4 buttons and the first setup is automatically started by pressing the F5 **OK** Confirmation button.

Alternatively, by pressing the "Assistant" (F2) button, all parameters required for setup can be set sequentially from a single menu and the setup can be started.

If the neutral connection is not made or if the cable is disconnected or its other end is left open, the LEDs on the device will repeatedly blink for approximately 100 - 200 ms to notify the user of the connection issue. In this case, the neutral connection must be checked and corrected.

If this setup step is skipped with F5 **Cancel** button, the device will periodically display a warning on the screen and redirect the user to the Setup Option in the quick menu when the menu button is pressed.

If a resetup is required after the initial setup, this option can be selected from the device's Setup Menu to start the setup process again.

3. MAIN SCREENS AND SUB-SCREENS

The device includes a total of 13 Main Screen titles. After the setup is completed, the default main screen is displayed as shown below.

NOTE : While navigating between other main and sub-screens, you can return to the Main Screen by pressing and holding the F5 button (labeled "Menu") until the blue home icon appears.

3.1. MAIN SCREEN OVERVIEW

The default main screen of the device is shown on the adjacent display. After completing the setup, the device starts with this screen.

This screen displays the following information in order, from top to bottom, for the three phases: Cos (ϕ), Voltage, Current, Total Reactive Energy Ratios (as percentages).

You can access the sub-screens of this main screen using the F1 and F2 buttons located on the left side of the Button Information Bar, which include short descriptions in white text.

3.2. MAIN VALUES

The screen on the side is the default home screen of the device. After completing the device setup, the device starts with this screen. On this screen, from top to bottom, the Cos ϕ of three phases, Voltage Current, and the Total Reactive Energy Ratios are displayed as percentages in order. The sub-screens of this main screen can be accessed using the F1 and F2 keys, which are located on the left side of the key information row and have short descriptions written in white.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	
MAIN VALUES																19.1 °C		
L1						L2						L3						
Cos φ		1,000				1,000				1,000								
Voltage		204,3 v				205,5 v				203,4 v								
Current		1,440 A				0,898 A				0,765 A								
Ratios		⋈ 1,5 %				⚡ 0,7 %												
SN:00000001						30/5 (6)				2024.07.11 08:58:49								🔍
Ratios		Line Values				Steps				V-I		U-F		📁 Menu				

3.2.1. Instantaneous Line Values

This screen displays real-time measured values, including:

Voltage, Current, Active Power, Reactive Power
Instantaneous Cos (ϕ), Power Factor, THDU (%)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Instant Line Values																	19.5 °C
					L1				L2				L3				
Voltage					217,0 v				216,0 v				216,2 v				
Current					2,738 A				1,877 A				1,919 A				
Active					77 w				37 w				69 w				
Reactive					2 VAr				0 VAr				0 VAr				
Cos φ					1,000				1,000				1,000				
PF					0,128				0,096				0,167				
THDU					5,0 %				5,3 %				5,1 %				
SN:00000001					30/5 (6)				2024.07.11				08:58:49				↕
Main Values				Compnstion				Steps				V-I		U-F		🏠 Menu	

3.2.2. Compensation Status

This screen provides an overview of the main compensation parameters, displaying:

Instantaneous Cos (ϕ) of the operation, Target Cos (ϕ), PF, Unmetered Power, Reactive Power of the operation, Total Step Power engaged. Residual Reactive Power drawn from the grid after compensation (for all three phases).

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
Compensation Status																	19.5 °C		
L1					L2					L3									
Instant Cos φ		1,000					1,000					1,000							
Target Cos φ		1,000					1,000					1,000							
PF		≠	0,997				≠	0,998				≠	0,990						
Unmetered Pwr		0 VAr					0 VAr					0 VAr							
Power of Load		⌘	1246 VAr				⌘	1328 VAr				⌘	1697 VAr						
Power of Steps		1200 VAr					1200 VAr					1200 VAr							
Residual		≠	46 VAr				≠	28 VAr				≠	97 VAr						
SN:00000001					30/5 (6)					2024.07.11					08:58:49			🔄	
Line Values			Ratios			Steps			V-I			U-F			☰ Menu				

3.2.3. Reactive to Active Ratios

This screen shows:

Total inductive, total capacitive and phase-specific real-time reactive ratios for both import and export, displayed as percentages.

These ratios are color-coded as follows:

Green: Within the limit values.

Blue: Exceeding the inductive limit.

Red: Exceeding the capacitive limit.

Gray: Indicates no import or export in the respective ratio cells.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Reactive Ratios																	19.9 °C
Ratios						Import						Export					
Σ Inductive						0,5 %						0,3 %					
Σ Capavitive						0,2 %						0,0					
Instant L1						2,5						0,0					
Instant L2						5,2						0,0					
Instant L3						3,0						0,0					
SN:00000001 30/5 (6) 2024.07.11 08:58:49																	
Compstion				Main Values				Steps				V-I		U-F		Menu	

3.3. VOLTAGE / CURRENT (RMS)

The adjacent screen displays:

Phase-to-Neutral voltages and average voltages on the left side. Current values for each phase and neutral current on the right side. This main screen has several sub-screens, accessible using the white buttons on the left side. While on this screen, pressing the "U - Frequency" button navigates to the Phase-to-Phase Voltages/ Frequency sub-screen.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18																	
VOLTAGE & CURRENT (RMS)																	20.0 °C
V1	204,5 v	I1	1,500 A														
V2	205,1 v	I2	0,945 A														
V3	203,3 v	I3	1,917 A														
Vavg	204,2 v	IN	0,843 A														
SN:00000001				30/5 (6)				2024.07.11 08:58:49									
VI-Dmd (E)				U-Freq.				Main Values				Powers				Menu	

3.3.1. Phase-to-Phase Voltages / Frequency

The adjacent screen displays:

Phase-to-Phase voltage values. Frequency values for each phase. Average voltage and average frequency values for the phases. While on this screen, pressing the "VA-Asymmetry" button navigates to the Voltage-Current Angle and Asymmetry screen.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18																	
Phase to phase Voltages / Frequency																	20.0 °C
U12	367,8 v	F1	50 Hz														
U23	369,8 v	F2	50 Hz														
U13	371,7 v	F3	50 Hz														
Uavg	369,7 v	Favg	50 Hz														
SN:00000001				30/5 (6)				2024.07.11 08:58:49									
V - I				VI-Asymtry				Main Values				Powers				Menu	

3.3.2. Voltage / Current Angle and Asymmetry

The adjacent screen displays:

Left side:

Fundamental voltage value for each phase. Phase angle differences between voltages. Percentage voltage asymmetry value. Right side:

Fundamental current value for each phase. Phase angle differences between currents. Percentage current asymmetry value. While on this screen, pressing the "VA-Peak(T)" button navigates to the Voltage-Current Min-Max (Import) sub-screen.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18																	
Volt / Current Angle & Asymmetry																	20.1 °C
fundV1	204,5 v	fundI1	204,5 A														
U12φ	239°	A12φ	239°														
fundV2	215,9 v	fundI2	215,9 A														
U23φ	239°	A23φ	239°														
fundV3	215,1 v	fundI3	215,1 A														
U13φ	239°	A13φ	239°														
Asymetry V	0,4	Asymetry I	0,4														
SN:00000001				30/5 (6)				2024.07.11 08:58:49									
U-Freq.				VI-Peak (I)				Main Values				Powers				Menu	

3.3.3. Voltage / Current Min-Max (Import)

This screen displays the minimum and maximum import values for the current and voltage of each phase separately. While on this screen, pressing the **VA-Peak(P)** button navigates to the Voltage / Current Min-Max (Export) sub-screen.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	IS	V	C	
Voltage / Current Min - Max (Import)																			20.1 °C		
V1	Max	213,8 v										A1	Max	16,97 A							
	Min	211,5 v											Min	0,721 A							
V2	Max	215,9 v										A2	Max	14,32 A							
	Min	214,1 v											Min	0,775 A							
V3	Max	292,8 v										A3	Max	17,45 A							
	Min	213,8 v											Min	0,737 A							
SN:00000001					30/5 (6)					2024.07.11					08:58:49					↻	
VA-Asymtry					VI-Peak (E)					Main Values					Powers					☰ Menu	

3.3.4. Voltage / Current Min-Max (Export)

This screen displays the minimum and maximum export values for the current and voltage of each phase separately. While on this screen, pressing the **VA-Dmd(C)** button navigates to the Voltage / Current Demand (Import) sub-screen.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	IS	V	C	
Voltage / Current Min - Max (Export)																			20.2 °C		
V1	Max	213,8 v										I1	Max	16,97 A							
	Min	211,5 v											Min	0,721 A							
V2	Max	215,9 v										I2	Max	14,32 A							
	Min	214,1 v											Min	0,775 A							
V3	Max	292,8 v										I3	Max	17,45 A							
	Min	213,8 v											Min	0,737 A							
SN:00000001					30/5 (6)					2024.07.11					08:58:49					↻	
VI-Peak (E)					VI-Dmd (I)					Main Values					Powers					☰ Menu	

3.3.5. Voltage / Current Demand (Import)

This screen displays the minimum and maximum import demand values for current and voltage for each phase separately. While on this screen, pressing the **VA-Dmd(P)** button navigates to the Voltage / Current Demand (Export) sub-screen.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	IS	V	C	
Voltage / Current Demand (Import)																			20.3 °C		
DV1	Max		213,8 v		DI1	Max		16,97 A													
	Min		211,5 v			Min		0,721 A													
DV2	Max		215,9 v		DI2	Max		14,32 A													
	Min		214,1 v			Min		0,775 A													
DV3	Max		292,8 v		DI3	Max		17,45 A													
	Min		213,8 v			Min		0,737 A													
SN:00000001					30/5 (6)					2024.07.11					08:58:49					^v	
VI-Peak (E)					VI-Dmd (E)					Main Values					Powers					≡ Menu	

3.3.6. Voltage / Current Demand (Export)

This screen displays the minimum and maximum export demand values for current and voltage for each phase separately.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	
Voltage / Current Demand (Export)																	20.3 °C	
DV1	Max	213,8 v										DI1	Max	16,97 A				
	Min	211,5 v											Min	0,721 A				
DV2	Max	215,9 v										DI2	Max	14,32 A				
	Min	214,1 v											Min	0,775 A				
DV3	Max	292,8 v										DI3	Max	17,45 A				
	Min	213,8 v											Min	0,737 A				
SN:00000001				30/5 (6)				2024.07.11				08:58:49				⌂		
VI-Dmd (I)				V-I				Main Values				Powers				⌂ Menu		

3.4. ACTIVE AND REACTIVE POWERS


The left side of this screen displays the active powers for each phase individually, as well as the total active powers for import and export. The right side displays the reactive powers for each phase individually, along with the total reactive powers for import and export. The inductive or capacitive nature of the powers is indicated by coil and capacitor symbols in front of the values. This main screen has several sub-screens, accessible using the white buttons on the left side. While on this screen, pressing the [Power Graph](#) button navigates to the [Power Triangle Graph](#) sub-screen.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	1	2	3
ACTIVE & REACTIVE POWERS																		20.6 °C		
P1		769 w				Q1		3 VAr												
P2		311 w				Q2		3 VAr												
P3		594 w				Q3		3 VAr												
ΣPi		1,67 w				ΣQi		7 VAr												
ΣPe		0 w				ΣQe		0 VAr												
SN:00000001						30/5 (6)			2024.07.12 09:54:45						🔍					
PQ-Dmd (E)		Power Graph		V-I		U-F		Phasr.Angle		🏠		Menu								

3.4.1. Power Triangle Graph

The center of this screen shows a Power Triangle Graph, where:

Red lines represent active power. Blue lines represent reactive power. Green lines represent apparent power. The graph is divided into two sections by import (consumption) and export (generation) axes and consists of four quadrants: The left side of the graph shows export values. The right side shows import values. The red-dashed section represents the inductive and capacitive values for the export power triangle.

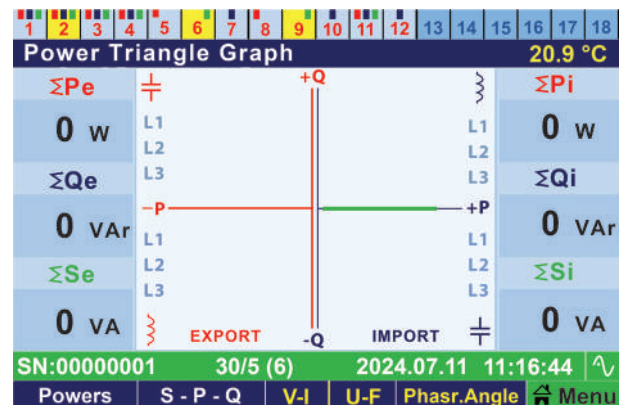

The blue-dashed section represents the inductive and capacitive values for the import power triangle. Each of the four quadrants displays the status of the phases (L1, L2, L3), indicating which phase is active in that specific quadrant.

For example:


In the displayed graph, L1 and L2 phases are operating in the inductive import region, while the L3 phase is in the capacitive import region.

On the left side of the screen, the total active, reactive and apparent powers for export are displayed.

On the right side, the same values for import are shown.



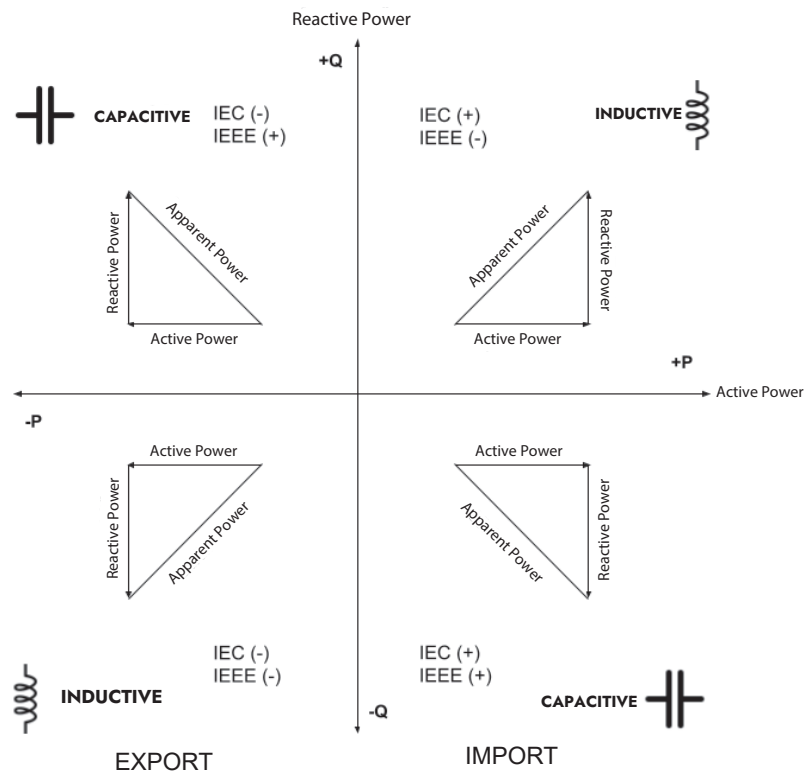


Pressing the S - P - Q button navigates to the Apparent / Active / Reactive Powers sub-screen.

Pressing the **S - P - Q** button navigates to the **Apparent / Active / Reactive** Powers sub-screen.



3.4.2. Apparent / Active / Reactive Powers

The left side of this screen displays the apparent power for each phase. The right side shows the active and reactive powers for each phase. While on this screen, pressing the **PQ-Peak(T)** button navigates to the Active / Reactive **Min-Max (Import)** sub-screen.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Apparent / Active / Reactive Powers																	21.1 °C
S1	926 VA		P1	761w													
			Q1		7VAr												
S2	562 VA		P2	310w													
			Q2		3VAr												
S3	778 VA		P3	594w													
			Q3		3VAr												
SN:00000001			30/5 (6)			2024.07.11			11:15:49								
Power Graph			PQ-Peak (I)			V-I		U-F		Phasr.Angle			 Menu				

3.4.3. Active / Reactive Min-Max (Import)

The left side of this screen displays the minimum and maximum active powers for each phase in import mode. The right side shows the minimum and maximum reactive powers for each phase in import mode. Reactive power values are annotated with capacitor or coil symbols in front of the values, depending on whether they are capacitive or inductive. While on this screen, pressing the **PQ-Peak(P)** button navigates to the Active / Reactive Min-Max (Export) sub-screen. The left side of this screen displays the minimum and maximum active powers for each phase in import mode. The right side shows the minimum and maximum reactive powers for each phase in import mode. Reactive power values are annotated with capacitor or coil symbols in front of the values, depending on whether they are capacitive or inductive. While on this screen, pressing the **PQ-Peak(P)** button navigates to the Active / Reactive **Min-Max (Export)** sub-screen.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Active / Reactive Min-Max (Import)																	21.1 °C
P1	Max	1,21 w					Q1	Max	3,62 kVAr								
	Min	71 w						Min	1,39 kVAr								
P2	Max	625 w					Q2	Max	3,09 kVAr								
	Min	63 w						Min	1,31 kVAr								
P3	Max	1,09 w					Q3	Max	3,77 kVAr								
	Min	71 w						Min	1,41 kVAr								
SN:00000001						30/5 (6)			2024.07.11			11:17:39			🔄		
S - P - Q		PQ-Peak (E)			V-I		U-F		Phasr.Angle			🏠 Menu					

3.4.4. Active / Reactive Min-Max (Export)

The left side of this screen displays the minimum and maximum active powers for each phase in export mode. The right side shows the minimum and maximum reactive powers for each phase in export mode. Reactive power values are annotated with capacitor or coil symbols in front of the values, depending on whether they are capacitive or inductive. While on this screen, pressing the **PQ-Dmd(C)** button navigates to the Active / Reactive **Demand (Import)** sub-screen.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18				
Active / Reactive Min-Max (Export)																	21.1 °C				
P1	Max							-23	w	Q1	Max							± 139	VAr		
	Min							-51	w		Min							± 573	VAr		
P2	Max							-15	w	Q2	Max							± 59	VAr		
	Min							-59	w		Min							± 593	VAr		
P3	Max							-7	w	Q3	Max							± 111	VAr		
	Min							-51	w		Min							± 597	VAr		
SN:00000001									30/5 (6)				2024.07.11				08:58:49				🔍
PQ-Peak (I)				PQ-Dmd(I)				V-I		U-F		Phasr.Angle				🏠 Menu					

3.4.5. Active / Reactive Demand (Import)

The left side of this screen displays the maximum and minimum active demands for each phase in import mode. The right side displays the maximum and minimum reactive demands for each phase in import mode. While on this screen, pressing the **PQ-Dmd(P)** button navigates to the Active / Reactive Demand (Export) sub-screen.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Active / Reactive Demand (Import)																	21.3 °C
DP1	Max	12 w							DQ1	Cap	⋈	19	VAr				
	Min	12 w								End	⊕	19	VAr				
DP2	Max	11 w							DQ2	Cap	⋈	2	VAr				
	Min	11 w								End	⊕	2	VAr				
DP3	Max	12 w							DQ3	Cap	⋈	8	VAr				
	Min	12 w								End	⊕	8	VAr				
SN:00000001				30/5 (6)				2024.07.11				10:58:49				🔍	
PQ-Peak(E)		PQ-Dmd(E)		V-I		U-F		Phasr.Angle		☰		Menu					

3.4.6. Active / Reactive Demand (Export)

The left side of this screen displays the maximum and minimum active demands for each phase in export mode. The right side displays the maximum and minimum reactive demands for each phase in export mode.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Active / Reactive Demand (Export)																21.4 °C	
DP1	Max				0 w		DQ1	Cap				0 VAr					
	Min				0 w			End				0 VAr					
DP2	Max				0 w		DQ2	Cap				0 VAr					
	Min				0 w			End				0 VAr					
DP3	Max				0 w		DQ3	Cap				0 VAr					
	Min				0 w			End				0 VAr					
SN:00000001				30/5 (6)				2024.07.11				10:59:51				Menu	
VI-Dmd (I)				Powers				V-I		U-F		Phasr.Angle				Menu	

3.5. PHASOR DIAGRAM AND ANGLES


The adjacent screen displays an intelligent phasor diagram, allowing the user to observe the phase angles between current and voltage. The phasor diagram consists of two concentric circles:

The outer thick circle and the inner thinner circle.

Thick, colored bars between the circles represent the angles of the phase voltages. Colored bars within the inner circle represent the phase currents and their angles. The length of the current bars changes dynamically based on the magnitude of the current, enabling the user to understand:

The phase angles between currents and voltages. The relative magnitude of each phase's current from the length of its corresponding colored bar. To assist with angle readings, the inner circle is marked with:

Thick black lines at 30° intervals. Thin short lines at 10° intervals. These markers help the user observe angles more accurately. While on this screen, pressing the **Power Quality** button navigates to the **Power Quality** sub-screen.

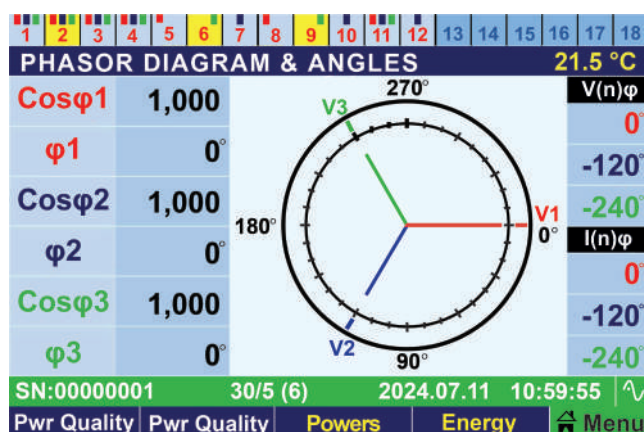

3.5.1. Power Quality

The adjacent screen displays the following parameters for each phase, in order: Cos (φ), PF (Power Factor), THDU (Total Harmonic Distortion for Voltage), THDI (Total Harmonic Distortion for Current)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	
Power Quality																22.8 °C		
L1								L2				L3						
Cos φ		1,000				1,000				1,000								
PF		0,518				0,609				0,616								
THDU		3,3%				3,6%				3,3%								
THDI		32%				25%				20%								
SN:00000001						30/5 (6)				2024.07.11 08:58:49								↕
Phasr-Angle				Phasr-Angle				Powers				Energy				Menu		

3.6. IMPORT ENERGIES

The adjacent screen displays the active, inductive and capacitive energy import values. Additionally, the OBIS codes for the consumed energies are shown on this screen.

While on this screen, pressing the [Energy \(Exp\)](#) button navigates to the [Energy Export](#) sub-screen.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18																	
IMPORT ENERGIES																	21.8 °C
Active (+)		000.000.409 Wh															
1.8.0																	
Inductive		000.000.095 WArh															
5.8.0																	
Capacitive		000.000.006 WArh															
8.8.0																	
SN:00000001					30/5 (6)					2024.07.11 12:07:33					√		
Ratio (Exp)			Energy (Üxp)			Phasr.Angle			Harmonics			Menu					

3.6.1. Export Energies

The adjacent screen displays the active, inductive and capacitive energy export values. The OBIS codes for the produced energies are also shown. While on this screen, pressing the [Energy \(All\)](#) button navigates to the [All Energies](#) sub-screen.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18																	
Export Energies																	21.9 °C
Active (-)		000.000.001 Wh															
2.8.0																	
Inductive		000.000.012 WArh															
7.8.0																	
Capacitive		000.000.000 WArh															
6.8.0																	
SN:00000001					30/5 (6)					2024.07.12 12:07:33					📶		
Energy (Imp)			Energy (All)			Phasr.Angle			Harmonics			🏠 Menu					

3.6.2. All Energies

The adjacent screen shows the complete indexes for both produced and consumed active, inductive and capacitive energies.

The OBIS codes for all energies (imported and exported) are displayed as well. While on this screen, pressing the **Ratio (Imp)** button navigates to the **Energy Ratios (Import)** sub-screen.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
All Energies																	22.0 °C
1.8.0	Imp	Active (+)	000.000.425 Wh														
5.8.0	Imp	Inductive	000.000.095 VArh														
8.8.0	Imp	Capacitive	000.000.006 VArh														
2.8.0	Exp	Active (-)	000.000.001 Wh														
7.8.0	Exp	Inductive	000.000.012 VArh														
6.8.0	Exp	Capacitive	000.000.000 VArh														
SN:00000001			30/5 (6)			2024.07.12			12:07:33			⌵					
Energy (Exp)			Ratio (Imp)			Phasr.Angle			Harmonics			Menu					

3.6.3. Energy Ratios (Import)

This screen displays the ratios of inductive and capacitive energies to active energy for each phase, separately for import.

While on this screen, pressing the **Ratio (Exp)** button navigates to the **Energy Ratios (Export)** sub-screen.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Energy Ratio (Import)																	22.0 °C
Inductive % Ratio_1	16,7 %			Capacitive % Ratio_1	1,1 %												
Inductive % Ratio_2	36,7 %			Capacitive % Ratio_2	2,0 %												
Inductive % Ratio_3	21,1 %			Capacitive % Ratio_3	1,3 %												
Inductive Σ% Ratio	22,1 %			Capacitive Σ% Ratio	1,3 %												
SN:00000001			30/5 (6)			2024.07.12			12:07:33			⌵					
Energy (All)			Ratio (Exp)			Phasr.Angle			Harmonics			Menu					

3.6.4. Energy Ratios (Export)

This screen displays the ratios of inductive and capacitive energies to active energy for each phase, separately for export.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Energy Ratio (Export)																	22.2 °C
Inductive Ratio_1	4,5 %			Capacitive Ratio_1	0,0 %												
Inductive Ratio_2	2,3 %			Capacitive Ratio_2	65,6 %												
Inductive Ratio_3	3 %			Capacitive Ratio_3	0,0 %												
Inductive RatioΣ	3,26 %			Capacitive RatioΣ	23,6 %												
SN:00000001			30/5 (6)			2024.07.12			12:07:33			⌵					
Ratio (Imp)			Energy (Imp)			Phasr.Angle			Harmonics			Menu					

3.7. VOLTAGE / CURRENT (%) HARMONICS

The adjacent screen lists the harmonic values for The device can measure harmonics up to the 63rd harmonic. The user can configure which harmonics to list (up to a specific harmonic) via the menu. If all harmonics are selected, they will be displayed on this screen.

While on this screen, pressing the **Hrm.V RMS** button navigates to the **Voltage (RMS) Harmonics** sub-screen.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
VOLTAGE / CURRENT % HARMONICS																	22.3 °C
Hrmonic	V1	V2	V3	I1	I2	I3											
THD%	2,6	2,6	2,4	72,2	149	87,9											
H.03%	0,8	1,1	0,7	53,4	105	67,6											
H.05%	2,0	1,9	2,0	21,3	35,1	20,6											
H.07%	0,6	0,5	0,5	11,6	23,1	16,5											
H.09%	1,0	0,9	0,8	4,9	5,3	1,9											
H.11%	0,4	0,6	0,5	10,7	30,3	13,9											
H.13%	0,2	0,3	0,2	6,5	19,2	9,8											
SN:00000001			30/5 (6)			2024.07.12 12:07:33											
%Hrm.VI ↑ ↓ %Hrm.VI			Energy			Hrm. V RMS			Menu								

3.8. VOLTAGE (RMS) HARMONICS

The adjacent screen lists the RMS values of voltage harmonics. The device can measure harmonics up to the 63rd harmonic. The user can configure which harmonics to list via the menu. If all harmonics are selected, they will be displayed on this screen.

While on this screen, pressing the **Hrm.A RMS** button navigates to the **Current (RMS) Harmonics** main screen.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
VOLTAGE (RMS) HARMONICS																	22.5 °C
Hrmonic	V1	V2	V3														
fundV	212,7 v	214,3 v	214,4 v														
HV.03	1,7 v	2,3 v	1,5 v														
HV.05	4,0 v	3,8 v	4,0 v														
HV.07	1,3 v	1,1 v	1,1 v														
HV.09	2,0 v	1,8 v	1,6 v														
HV.11	0,8 v	1,2 v	1,0 v														
HV.13	0,4 v	0,6 v	0,4 v														
SN:00000001			30/5 (6)			2024.07.12 12:07:33											
RMS-H.V ↑ ↓ RMS-H.V			Harmonics			Hrm.I RMS			Menu								

3.9. CURRENT (RMS) HARMONICS

The adjacent and below screens list the RMS values of current harmonics. The device can measure harmonics up to the 63rd harmonic. The user can configure which harmonics to list via the menu. If all harmonics are selected, they will be displayed on this screen.

While on this screen, pressing the **Hr.V Graph** button navigates to the **Voltage Harmonic Graph** main screen.


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
CURRENT (RMS) HARMONICS																	22.6 °C
Hrmonic	I1	I2	I3														
fundI	3,538 A	1,452 A	2,695 A														
HI.03	1,889 A	1,531 A	1,819 A														
HI.05	0,713 A	0,503 A	0,552 A														
HI.07	0,430 A	0,361 A	0,465 A														
HI.09	0,169 A	0,083 A	0,042 A														
HI.11	0,317 A	0,442 A	0,375 A														
HI.13	0,229 A	0,281 A	0,278 A														
SN:00000001			30/5 (6)			2024.07.12 12:07:33											
RMS-H.I ↑ ↓ RMS-H.I			Harmonics			Hr.V Graph			Menu								

3.10. VOLTAGE HARMONIC GRAPH

The adjacent screen displays the voltage harmonic values for each phase as a bar chart (%). Additionally, the total harmonic distortion percentages (THDU) for each phase's voltage are shown on the screen.

The default scale is set to automatic and the voltage harmonic graphs for each phase are displayed as percentages. If closer observation of smaller harmonics is required, pressing the F1 button allows the percentage scale to be adjusted to a different value, providing a more detailed view. The number of harmonics to be displayed on the graph can be configured via the menu. If the configured number exceeds the screen limit, an additional sub-screen will be automatically created. Pressing the **HV. Graph** button navigates to the next sub-screen.

While on this screen, pressing the **Hr.A Graph** button navigates to the **Current Harmonic Graph main** screen.

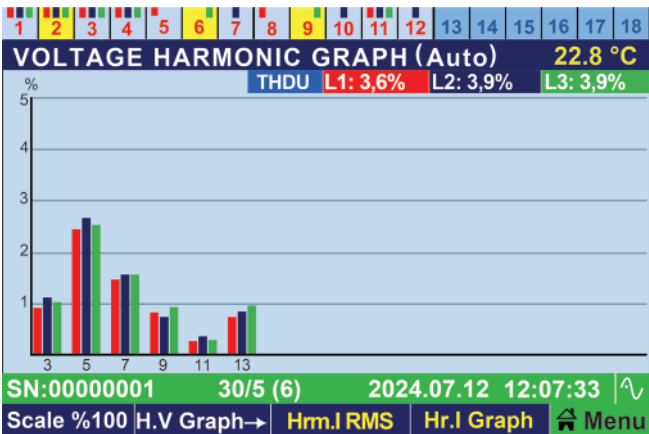

3.11. CURRENT HARMONIC GRAPH


The adjacent screen displays the current harmonics for each phase as a bar chart (%). Additionally, the total harmonic distortion percentages (THDI) for each phase's current are shown on the screen.

The default scale is set to automatic and the harmonic graphs for each phase are displayed in percentages.

If closer observation of smaller harmonics is required, the percentage scale can be adjusted by pressing the appropriate button. This allows for a more detailed view of smaller harmonics.

The number of harmonics to be displayed on the graph can be configured via the menu. If the number exceeds the screen's capacity, an additional sub-screen will be automatically created.

While on this screen, pressing the **H.A Graph** button navigates to the next sub-screen.

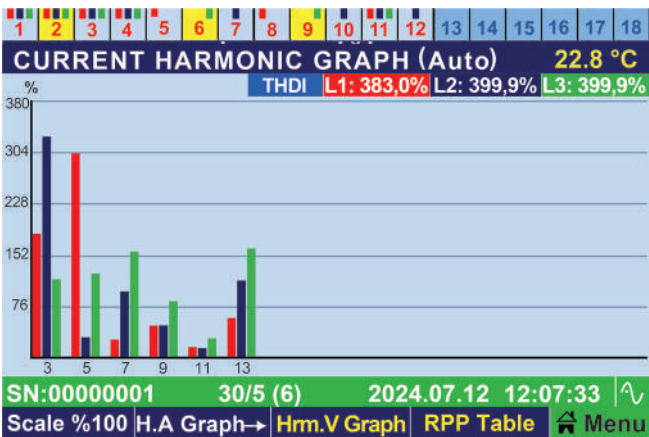

3.12. RPP Table (Reactive Power Profile)

This screen lists the reactive powers drawn by the operation, recorded as reactive power samples. By pressing the white button in the lower-left corner, you can access sorted lists of power profiles based on:

Energy, Time, Inductive power, Capacitive power, Q/P ratio. The color of the listed reactive powers indicates the status of compensation:

Green: The steps fully compensate for the drawn reactive power.

Blue: The capacitors are insufficient.
Red: The shunt reactors are insufficient.
Yellow background: Indicates the current reactive power sample drawn by the operation.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
TABLE of RPP (by Time)																	23.5 °C
Count:5				L1(kVAr)			L2(kVAr)			L3(kVAr)			Share				
Example#1				± 0,49			± 0,67			± 0,85			57,7%				
Example#2				± 0,95			± 0,57			± 0,29			23,6%				
Example#3				± 1,40			± 1,20			± 1,90			13,7%				
Example#4				± 1,10			± 0,33			± 1,20			4,5%				
Example#5				± 1,60			± 0,81			± 1,00			0,3%				
SN:00000001				30/5 (6)			2024.07.12			12:07:33			^v				
by Energy				↓ Examples			Hrm.I RMS			Logs			Menu				

3.13. WARNING LOG

This screen displays the descriptions of warnings, the number of occurrences and the timestamps of the first and last occurrences.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
WARNING LOGs																	22.4 °C
<3>		Warning Name										Tarih / Saat (Son)			Cnt		
W#1		Fuse Dropped on L1										2024.07.11 / 15:17:33			013		
W#2		Step Common 2 Low Voltage										2024.07.11 / 15:05:07			004		

3.13.1 Event Log

This screen provides the descriptions of events, the number of occurrences and the timestamps of the first and last occurrences.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Event Log																	22.4 °C
<18>		Event Name								Date / Time (Last)					Cnt		
E#1		Device Powered On								2024.07.11 / 08:29:48					011		
E#2		Device Powered Off								2024.07.10 / 15:09:21					010		
E#3		Language Changed								2024.07.10 / 14:26:13					001		
E#4		Energy Index Cleared								2024.07.10 / 13:44:03					002		
E#5		Notifications Cleared								2024.07.10 / 13:38:47					002		
E#6		Step 18 Added								2024.07.10 / 13:38:40					001		
E#7		Compensation Started								2024.07.10 / 13:38:40					011		
SN:00000001					30/5 (6)					2024.07.12 12:07:33					↕		
Warnings			↓ Events			RPP Table			Step			⌵ Menu					

3.15. Steps (Nominal / kVAr)

As previously described, the Step Information Bar at the top of the screen provides a summarized view of step information for each step. On this main screen, the nominal power of each step for every phase, their total power and their status are listed in groups. The top-right corner of the screen shows the voltage level and status of the step group commons.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	
STEPS (Nominal / kVAr)												Com: 213V						
Grp-1	L1			L2			L3			Total			Status					
K#1	÷	0,37		÷	0,37		÷	0,37		÷	1,00		Ready					
K#2	÷	0,55		÷	0,55		÷	0,55		÷	1,50		Online					
K#3	÷	0,91		÷	0,91		÷	0,91		÷	2,50		Ready					
K#4	÷	1,80		÷	1,80		÷	1,80		÷	5,10		Ready					
K#5	÷	0,46		0,46			0,46			÷	0,43		Ready					
K#6	0,00			0,00			÷	0,00		÷	0,20		Online					
K#7	0,00			÷	0,00			0,00			÷	0,40		Ready				
SN:00000001				30/5 (6)				2024.07.12				12:07:33				🔄		
Detail		↓ Step		RPP Table				Main Value				🏠 Menu						

3.15.1 Step Usage Details

This screen displays how long and how many times each step has been used and its total power. The current status of the step is also shown in the rightmost column, both as text and in color for easy identification.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Step Usage Details												28.0 °C					
Grup-1	Count			Time			Σ Q (kVAr)			Status							
K#1	11			2sa09d			÷ 1,00			Ready							
K#2	14			58d39sn			÷ 1,50			Online							
K#3	8			2sa07d			÷ 2,50			Ready							
K#4	2			4sn			÷ 5,10			Ready							
K#5	4			41sn			÷ 0,43			Ready							
K#6	8			1d15sn			÷ 0,20			Online							
K#7	10			50d48sn			÷ 0,40			Online							
SN:00000001				30/5 (6)				2024.07.12				12:07:33				⌵	
Detail		⬇ Step		RPP Table				Main Value				🏠 Menu					

4. RKRC PFC MAIN MENU

4.1. QUICK MENU

Menu → Quick Menu

The Quick Menu allows for fast configuration of the device's steps, response times, Modbus address, date and time and language. Additionally, documents such as the user manual can be accessed via the internet guide by scanning the QR code visible in this section.

4.1.1 Steps

Menu → Quick Menu → Steps

4.1.1.1 Step Learning: Starts step learning in smart mode.

4.1.1.2 Control and Clear Details: Enables viewing the status of steps individually and manually activating/deactivating them.

4.1.1.3 Step Common Control: Activates voltage monitoring for step commons.

4.1.1.4 Clear Notifications: Clears notifications in the Step Information Bar, removing warning colors from the step's background.

4.1.2. Response Times

Menu → Quick Menu → Response Time

Allows adjustment of inductive and capacitive response times to desired values.

4.1.3. Modbus Address

Menu → Quick Menu → Modbus Address

Configures the communication settings for Modbus, allowing the device's Modbus address to be set within the range 1-247.

After entering the desired value, press the **OK** button to update the parameter.

⚡ NOTE: Default Modbus address: 1 (factory setting).

4.1.4. Internet Guide

Menu → Quick Menu → Internet Guide

Provides access to a QR code that redirects to a website containing resources such as the device's user manual.

4.1.5. Date & Time

Menu → Quick Menu → Date & Time

Allows modification of the device's date and time settings if needed. This menu is removed after initial setup.

4.1.6. Language

Menu → Quick Menu → Language

Enables changing the device's language to either English or Turkish.

4.1.7. Start Setup / Assistant

Menu → Quick Menu → Start Setup / Assistant

Setup begins by selecting and confirming the Current Transformer Ratio (C.T). Alternatively, pressing the "Assistant" button provides sequential access to general parameters of the PFC through a single menu.

4.2. Steps and Settings

Menu → Steps and Settings

This section includes the Steps Menu, where all settings related to steps can be configured. Users can view step powers, manually set values and perform actions such as step learning and control.

4.2.1. Step Powers and Manual Entry

Menu → Steps and Settings → Step Powers and Manual Entry

Allows viewing step powers and entering values manually. Select the desired step, press **OK** and input the required values for each phase. Once values are confirmed, the step is set and the step number in the Step Information Bar is underlined to indicate manual entry.

4.2.2. Step Learning

Menu → Steps and Settings → Step Learning

4.2.2.1 All Steps

Starts the learning process for all steps in one of three modes: Smart, Regular or Fast.

4.2.2.1.1 Smart

Sequentially learns all steps except those currently in use. Temporarily active steps are disengaged at the most suitable time and the learning process completes with discharging steps being learned last.

4.2.2.1.2. Regular

Starts from the 1st step and learns all steps by engaging and disengaging them in sequence. Active steps are disengaged first, allowed to complete their discharge times and then engaged and disengaged for learning.

4.2.2.1.3. Fast

Quickly disengages all active steps and starts learning from the 1st step. Skips discharging steps initially, learning them last.

4.2.2.2 Single Step Learning

Allows learning of a single, user-selected step.

4.2.2.3 Group 1 (Steps 1-7)

Starts learning for steps in Group 1 (1-7) using Smart, Regular or Fast modes.

4.2.2.4 Group 2 (Steps 8-12)

Starts learning for steps in Group 2 (8-12) using Smart, Regular or Fast modes.

4.2.2.5 Group 3 (Steps 13-18)

Starts learning for steps in Group 3 (13-18) using Smart, Regular or Fast modes.

4.2.2.6 Pending Steps

If the reactive load movement in the operation continues during step learning, sensitivity decreases and ongoing learning processes are delayed until line stability is achieved. Once the line becomes stable, the PFC automatically resumes pending learning processes. This menu allows users to manually initiate learning for such steps.

† NOTE: If no steps are pending for learning, this menu remains hidden.

4.2.3. Control and Clear Details

Menu → Steps and Settings → Control and Clear Details

Enables manual control of the selected step. Use the **OK** button to engage or disengage the desired step. If a step is being discharged, press and hold the **OK** button to engage it during discharge.

4.2.4. Settings

Menu → Steps and Settings → Settings

4.2.4.1 Discharge Time: Defines the discharge time for steps.

4.2.4.1.1 Discharge Time for All: Sets the discharge time for all steps in one step.

4.2.4.1.2 Discharge Time (Steps 1-7): Sets the discharge time for steps 1-7.

4.2.4.1.3 Discharge Time (Steps 8-12): Sets the discharge time for steps 8-12.

4.2.4.1.4 Discharge Time (Steps 13-18): Sets the discharge time for steps 13-18.

4.2.4.2 Equal Aging:

Manages parameters related to the equal aging method, ensuring effective and long-lasting use of similar compensation steps.

4.2.4.2.1 Control: Enables or disables the equal aging feature, which balances the usage of compensators to enhance overall system performance.

4.2.4.2.2 Equivalent Percentage: Sets the acceptable power difference percentage among compensators to be considered equivalent. Example: If set to 5%, a 25 kVAr capacitor will accept equivalents with power values between 23.75 kVAr and 26.25 kVAr. Capacitors outside this range will not be considered equivalent.

4.2.4.2.3 Operating Time Difference: Sets the maximum time difference between the operating durations of equivalent compensators. Example: If set to 3 hours, the PFC will prioritize compensators with shorter operating times when the difference reaches 3 hours.

4.2.4.3 Auto Control:

This parameter enables or disables dynamic monitoring of steps during compensation. When active, the PFC dynamically observes the steps, automatically measures and verifies their values during stable operating conditions and issues warnings if differences or issues are detected. The PFC uses these updated measurements to ensure stable and effective compensation.

Factory Default: Continuous monitoring is enabled.

4.2.4.4 Delay Time between Steps:

Determines the waiting time between pulling or releasing two steps in the set applied by the PFC. Adjustable with a resolution of 5 ms; the default value is 500 ms.

4.2.4.4.1 Delay for All: Sets the delay time for all steps in one step.

4.2.4.4.2 Delay (Steps 1-7): Sets the delay time for steps 1-7.

4.2.4.4.3 Delay (Steps 8-12): Sets the delay time for steps 8-12.

4.2.4.4.4 Delay (Steps 13-18): Sets the delay time for steps 13-18.

4.2.4.5 Advanced Settings:

4.2.4.5.1 Reset All Details: Resets operating durations, pull/release counts and previous values for all steps.

4.2.4.5.2 Learning Measurement Error: Sets the maximum allowable error percentage between pull and release values during step learning.

4.2.4.5.3 Imbalance Percentage: Defines the maximum acceptable power difference percentage between phases for three-phase capacitors. If the imbalance exceeds this percentage, the step is flagged as faulty. Faulty steps are activated only when total compensation is insufficient.

4.2.4.5.4 Depreciation Percentage: Sets the percentage of observed power loss or increase in phase values during re-learning of a step. If the change exceeds this value, the step is flagged for value loss/change and its background color turns orange.

4.2.5 Step Common Control

Menu → Steps and Settings → Step Common Control

4.2.5.1 Step Common Control: Manages the voltage type (AC/DC), contactor coil voltage and percentage deviation parameters for step commons. If the measured voltage deviates from the specified contactor coil voltage by the set percentage, the device issues a warning and disables all steps in the corresponding group.

4.2.5.2. Step Common 1: Configures parameters for Common 1 input: Voltage type (AC/DC) Contactor coil voltage Percentage deviation If the measured voltage deviates from the specified contactor coil voltage by the set percentage, the device: Issues a warning for Common 1 input. Disables all steps in Group 1 (Steps 1-7).

4.2.5.3. Step Common 2: Configures parameters for Common 2 input: Voltage type (AC/DC) Contactor coil voltage Percentage deviation If the measured voltage deviates from the specified contactor coil voltage by the set percentage, the device: Issues a warning for Common 2 input. Disables all steps in Group 2 (Steps 8-12).

4.2.5.4. Step Common 3: Configures parameters for Common 3 input: Voltage type (AC/DC) Contactor coil voltage Percentage deviation If the measured voltage deviates from the specified contactor coil voltage by the set percentage, the device: Issues a warning for Common 3 input. Disables all steps in Group 3 (Steps 13-18).

4.2.6. Clear Notifications

Menu → Steps and Settings → Clear Notifications

If the "Yes" option is confirmed, all notifications for the steps are cleared. When notifications are cleared, the background colors used for different warnings in the Step Information Bar are removed.

4.3. COMPENSATION

Menu → Compensation

This menu allows configuration of all parameters related to compensation.

4.3.1. Reactive Limits

Menu → Compensation → Reactive Limits

4.3.1.1. Inductive Limit: Sets the inductive penalty limits.

4.3.1.2. Capacitive Limit: Sets the capacitive penalty limits.

4.3.2. Response Times

Menu → Compensation → Response Times

4.3.2.1. Inductive: Time the device waits before responding to an inductive limit excess.

4.3.2.2. Capacitive: Time the device waits before responding to a capacitive limit excess.

4.3.2.3. Normal: Time the device waits to provide an optimal response when no limit excess occurs.

4.3.3. Unmetered Power

Menu → Compensation → Unmetered Power

This menu configures additional reactive loads (e.g., inductive transformer effects or capacitive effects of long cables) that are not metered by the PFC but could lead to penalties. These unmetered loads are factored into compensation and can be set as either timed or continuous.

4.3.3.1. Unmetered Power 3-Phase: Total Unmetered Power evenly distributed across all three phases, with a 100 VAr resolution. A value of “0” disables Unmetered Power compensation.

4.3.3.2. Operating Time: When timed, Unmetered power compensation ends after the specified duration and the value of Unmetered Power resets to 0. A value of “0” for Operating Time means the setting is considered continuous.

4.3.3.3. Unmetered Power L1: Independent settings for Unmetered power for L1 phase, with a 1 VAr resolution, used to address discrepancies between meter and PFC measurements.

4.3.3.4. Unmetered Power L2: Independent settings for Unmetered power for L2 phase, with a 1 VAr resolution, used to address discrepancies between meter and PFC measurements.

4.3.3.5. Unmetered Power L3: Independent settings for Unmetered power for L3 phase, with a 1 VAr resolution, used to address discrepancies between meter and PFC measurements.

4.3.4. Target Cos / Tan

Menu → Compensation → Target Cos / Tan

4.3.4.1. Target Cos / Tan: Sets the desired target Cos (φ) and Tan (φ) values. Default values are Cos (φ) = 1 and Tan (φ) = 0.

4.3.4.2. Operating Time: Specifies how long the target Cos (φ) and Tan (φ) values remain active. When the duration ends, the target Cos (φ) resets to 1.0. A value of 0 makes the setting continuous.

4.3.5. Generator

Menu → Compensation → Generator

4.3.5.1. Compensation with Generator: Enables or disables compensation when the generator is active.

4.3.5.2. Target Cos / Tan (Generator): Sets the target Cos (φ) and Tan (φ) values for compensation during generator operation.

4.3.6. Export Compensation

Menu → Compensation → Export Compensation

Allows enabling or disabling compensation during export.

4.3.7. Protection

Menu → Compensation → Protection

4.3.7.1. Over Voltage: Enables Over Voltage protection.

4.3.7.2. Under Voltage: Enables under Voltage protection.

4.3.7.3. Over Harmonics: Enables Over voltage harmonic protection.

4.3.7.4. Over Temperature: Enables Over Temperature protection.

4.3.7.5. Set Values: Sets the limit values for protection parameters.

4.3.8. Hysteresis

Menu → Compensation → Hysteresis

Defines the percentage thresholds for applying new compensation settings based on current operating conditions.

4.3.8.1. Inductive: Sets the hysteresis percentage for applying new solutions when operating in the inductive region.

4.3.8.2. Capacitive: Sets the hysteresis percentage for applying new solutions when operating in the capacitive region.

4.3.8.3. Normal: Sets the hysteresis percentage for applying new solutions when operating in the normal (reactive within limits) region.

4.4. Device Settings

Menu → Device Settings

This menu allows configuration of various device parameters.

4.4.1. Measurement and Transformers

Menu → Device Settings → Measurement and Transformers

4.4.1.1. Current Transformer Ratio: Set the current transformer (CT) ratio between 5/5 and 10000/5. The current CT ratio blinks in the menu. Use the up and down buttons to select the desired value, then press **OK** to update it.

4.4.1.2. Current-Voltage Pairs: Displays which voltage inputs correspond to the measured currents.

4.4.1.3. Current Transformer Directions: Displays the direction of the current connections.

4.4.1.4. Voltage Transformers: Allows setting line voltage and measurement voltage.

4.4.1.4.1. Line Voltage: Set the line voltage within a range of 90 V to 46000 V. The current line voltage blinks in the menu. Use the up and down buttons to select the desired value, then press **OK** to save it.

4.4.1.4.2. Measurement Voltage: Set the measurement voltage within a range of 22 V to 1000 V. The current measurement voltage blinks in the menu. Use the up and down buttons to select the desired value, then press **OK** to save it.

4.4.2. Modbus Configuration

Menu → Device Settings → Modbus Configuration

Configure parameters for Modbus communication.

4.4.2.1. Modbus Address: Assign a unique Modbus address (1–247) to the PFC, distinct from other connected devices. Use the up and down buttons to select the desired address, then press **OK** to update it.

4.4.2.2. Modbus Speed (bps): Set the Modbus communication speed (baud rate) in bits per second (bps). Select the desired speed using the up and down buttons, then press **OK** to save it.

4.4.2.3. Data, Stop Bits and Parity:

4.4.2.3.1. Data Bits: Displays the number of data bits used in Modbus communication. This parameter depends on other settings and cannot be manually changed.

4.4.2.3.2. Parity Setting: Set the parity bit to None, Odd or Even, matching the application or device.

4.4.2.3.3. Stop Bits: Set the stop bits used in communication to 1 or 2.

4.4.2.3.4. Silent Interval (xBit): Configures the silent interval (xBit) after the stop bit to determine how long the device waits before resuming communication.

4.4.2.3.5. Mode: Select the Modbus communication mode: RTU or ASCII.

4.4.2.3.6. Modbus Protection: Configures password protection for read/write Modbus requests. If enabled, passwords must be set in the password menu. After three incorrect attempts, no new password entry will be possible until the PFC is restarted.

4.4.2.3.6.1. Read Protection: Activates or deactivates read protection.

4.4.2.3.6.2. Write Protection: Activates or deactivates write protection.

4.4.2.3.6.3. Read Password: Sets a four-digit password for active read protection.

4.4.2.3.6.4. Write Password: Sets a four-digit password for active write protection.

4.4.3. Display Settings

Menu → Device Setting → Display Settings

Average Values: Configures the number of samples used for averaging display values, how frequently samples are taken and the percentage difference required for display updates.

4.4.3.1. Average: Here, it is determined how many samples will be taken for the values shown on the screen and the maximum percentage difference between the samples to be included in the average calculation.

4.4.3.1.1. Sample Count: Number of samples to calculate average values (1–16).

4.4.3.1.2. Refresh Interval: Time interval for sample collection (100 ms – 1.0 s).

4.4.3.1.3. Control Percentage: Percentage difference required for value updates (5%–50%).

4.4.3.2. Password Protection: Activates or deactivates menu access restrictions requiring a password.

4.4.3.3. Access Level: Enables password-protected access levels.

4.4.3.4. Hide Device Messages: Hides warning messages about line values and compensation status from being displayed on the screen.

4.4.3.5. Screen Saver: Toggles the screen saver on or off.

4.4.3.6. Screen Timeout: Configures the delay (2–240 minutes) before the screen saver activates.

4.4.3.7. Brightness Level: Adjusts screen brightness (5%–100%).

4.4.4. Advanced Settings

Menu → Device Settings → Advanced Set

This is the settings menu where the device can be turned off and on, reset, returned to factory settings and the measurement period can be changed.

4.4.4.1. Power Off / On: Safely powers the device on or off via the screen.

4.4.4.2. Default Settings: Resets all customized settings and data to factory defaults.

4.4.4.3. Device Reset: Clears stored information and restarts the device for reconfiguration.

4.4.4.4. Measurement Period: Configures data collection and measurement interval (20 – 500 ms).

4.4.5. Device Information

Menu → Device Settings → Device Information

4.4.5.1. Serial Number: Displays the device's serial number.

4.4.5.2. Software Version: Shows the device's software version.

4.4.5.3. Build Date and Time: Displays when the device's software was compiled.

4.4.5.4. Hardware Version: Displays the hardware version of the device.

4.4.5.5. Date and Time: Configures the device's date and time settings.

4.4.5.6. Language / Dil: Sets the device's language (English or Turkish).

4.4.5.7. Working Hours: Displays the total time the device has been powered on.

4.4.5.8. Periodic Maintenance Time: Configures the periodic maintenance interval (in hours).

⚡ NOTE: Default: Disabled.

4.5. Analyzer

Menu → Analyzer

The analyzer section contains settings for electrical measurement parameters such as energy, peak values, demand and harmonics.

4.5.1. Energies

Menu → Analyzer → Energies

To Clear / Reset energy values, navigate to the "Yes" option using the arrow buttons and confirm with the OK button. All energy values will be cleared.

4.5.2. Peak Values

Menu → Analyzer → Peak Values

To Clear / Reset minimum and maximum electrical peak values: Navigate to the "Yes" option using the arrow buttons and confirm with the OK button. All peak values will be cleared.

4.5.3. Demands

Menu → Analyzer → Demands Values

This is the menu where the periods of the demand values are set and the values are reset.

4.5.3.1. Clear / Reset: To clear demand values, navigate to the "Yes" option and confirm with the OK button. All demand values will be Clear / Reset.

4.5.3.2. Demand Period: Set the demand period between 1 and 60 minutes. Adjust using the arrow buttons and confirm with the OK button.

NOTE: The factory default demand period is 15 minutes.

4.5.4. Harmonics

Menu → Analyzer → Harmonics

Profil

View specific harmonic ranges for current and voltage:

- 1–13 Odd, 1–13 Even or 1–13 All
- 1–31 Odd, 1–31 Even or 1–31 All
- 1–63 Odd, 1–63 Even or 1–63 All

Custom Profile

Select a custom harmonic profile with specific limit and analysis settings:

Limit: Adjust the harmonic limits to be monitored.

Analysis: Specify whether to monitor odd, even or all harmonics.

4.5.5. Reactive Power Profile (RPP)

Menu → Analyzer → Reactive Power Profile

Reactive Power Profile (RPP) parameters are set in this section.

4.5.5.1. Clear / Reset: Clear recorded reactive power profiles by navigating to the "Yes" option and confirming.

4.5.5.2. Power Resolution: Set the resolution for reactive power sampling. Adjust using the arrow buttons and confirm with the **OK** button.

4.5.5.3. Maximum Difference (%): Set the maximum percentage change in load required to record a new reactive power profile. Adjust using the arrow buttons and confirm with the **OK** button.

4.5.5.4. Difference Percentage: If the difference between the reactive power profiles exceeds the set percentage, a new sample is recorded. If the profile is full, the percentage automatically increases and existing samples are compressed to make room for new entries.

4.6. WARNING AND EVENT LOGS

Menu → Warning and Event Log

This menu allows configuration of alarm settings, clearing logs and enabling alarm LEDs.

4.6.1. Clear Event Log

Menu → Warning and Event Log → Clear Event Log

Clear recorded events in the Event Log. Navigate to "Yes" and confirm to clear the log.

4.6.2. Clear Warning Log

Menu → Warning and Event Log → Clear Warning Log

Clear recorded warnings in the Warning Log. Navigate to "Yes" and confirm to clear the log.

4.6.3. Set Values

Menu → Warning and Event Log → Set Values

The PFC uses the following thresholds for alarm and protection functions:

4.6.3.1. Over Voltage: Set the threshold for triggering an Over Voltage alarm.

Selectable range: 230 V – 920 V.

4.6.3.2. Under Voltage: Set the threshold for triggering an Under Voltage alarm.

Selectable range: 5 V – 230 V.

4.6.3.3. Over Harmonics: Set the percentage value for triggering a voltage harmonics alarm.

Selectable range: 2% – 50%.

4.6.3.4. Over Temperature: Set the minimum temperature value for triggering a high-temperature alarm. Selectable range: 40°C – 90°C.

4.6.3.5. Weak Line Percentage: Set the percentage threshold for voltage changes on the inputs during step learning or setup. If the voltage change exceeds this value, the PFC will issue a warning. Selectable range: 1% – 10%.

NOTE: Check the line and neutral connections if this warning appears.

4.6.4. Fault Log

Menu → Warning and Event Logs → Fault Log

Enables or disables the log that records faults occurring during the device's operation.

4.6.5. Permanent Warning LED

Menu → Warning and Event Log → Permanent Warning

If an alarm occurs during operation and you want the alarm icon to be permanently displayed in red, set this option to "Active".

4.7. SETUP

Menu → Setup

This menu handles all the settings related to the Device's Setup.

4.7.1. Start Setup / Assistant

Menu → Setup → Start Setup / Assistant

Selecting "Yes" in this menu will start the device setup process.

4.7.2. Settings

Menu → Setup → Settings

4.7.2.1. Setup Mode: Define whether the setup will use capacitors, or reactors.

4.7.2.2. Network Frequency: Set the device to operate at 50 Hz or 60 Hz.

4.7.2.3. C.T. Connection Type: Configure power measurement to use either three current transformers for all three phases or only one selected phase.

4.7.2.4. Current-Voltage Matching: Enable or disable current-voltage matching during setup. Default: Enabled.

4.7.2.5. Auto Control: Dynamically detects changes in current transformer and voltage inputs, redirecting to automatic setup if necessary. Default: Enabled.

4.7.2.6. Recovery for Measurements: Allows recovery of measurements by averaging available phase values if there are disconnections in voltage or current inputs. Default: Enabled.

4.7.2.7. Advanced Settings

4.7.2.7.1. Try Count: Defines the number of successful measurement repeats required for completing setup.

4.7.2.7.2. Error at Setup: Adjust the maximum percentage difference allowed between measurements during capacitor step engagement and release.

4.7.2.7.3. Phase-to-Phase Control: Disables the control preventing the same phase from being connected to multiple voltage inputs. Designed for expert users.

4.7.2.7.4. C.T. Special Ratio L1: Assign a temporary special ratio for the current transformer connected to phase L1 in case of mismatched ratios due to errors or requirements.

4.7.2.7.5. C.T. Special Ratio L2: Similar to L1 but for phase L2.

4.7.2.7.6. C.T. Special Ratio L3: Similar to L1 but for phase L3.

4.7.3. Ignore the First Setup

Menu → Ignore the First Setup

Select "Yes" in this menu to ignore/skip the first setup process if not required.