

# Analog Input Module User Manual



**ADDRESS:** Ikitelli OSB Mah. Cevre  
14. Blok Sok. Telas Blok Dis Kapi  
No: 1 Kat: 1-2 Basaksehir/Istanbul

**Phone:** +90 212 438 80 24  
**Fax:** +90 212 438 80 25

**info@gruparge.com**

## CONTENTS

|                                          |   |
|------------------------------------------|---|
| PROPER USE AND SAFETY REQUIREMENTS ..... | 3 |
| 1. INTRODUCTION .....                    | 4 |
| 1.1. General Features .....              | 4 |
| 1.2. Technical Features .....            | 4 |
| 1.3. Technical Drawing .....             | 4 |
| 1.4. Connection Diagrams .....           | 5 |
| 2. MODBUS MAP .....                      | 6 |
| 2.1. Modbus Map .....                    | 6 |
| 2.2. Communication Parameters .....      | 7 |
| 2.3. Modbus Speed .....                  | 7 |

## PROPER USE AND SAFETY REQUIREMENTS



Cut all the power when connecting and disconnecting the device to a panel.



Do not clean the device with a solvent or similar material. Only use a dry cloth.



Please do not intervene to the device when a technical problem is encountered and get in contact with a technical service within the shortest time.



If the warnings are not taken into account, our company or the authorized dealer shall not be held responsible for the negative consequences.



Do not dispose in the trash, the device must be delivered to the collection centers (electronic device recycling centers). It should be recycled or disposed of without harming human health and environment.



The installation, assembly, activation and operation of the device should be done and used by only expert professionals and in accordance with safety regulations and instructions.

# 1. INTRODUCTION


## 1.1. General Features

Analog sensor data providing 0-10 V DC and 4-20 mA DC output with the Analog Input Module can be read via the RS-485 line using the Standard Modbus RTU protocol. The device can be mounted on a panel rail.


## 1.2. Technical Features

- Microprocessor based.
- **Supply Voltage:** 9-30 V DC.
- **Communication Protocol:** RS-485 / Modbus RTU.
- There are 3 x 0-10 V DC analog sensor input.
- There are 3 x 4-20 mA DC analog sensor inputs.
- **LED Status:** It has POWER, ERROR and RS-485 LED
- **Ambient Temperature:** -10 °C /+55 °C.
- **Supply Consumption Power:** < 1 VA.
- **Protection Class:** IP40.

## 1.3. Technical Drawing

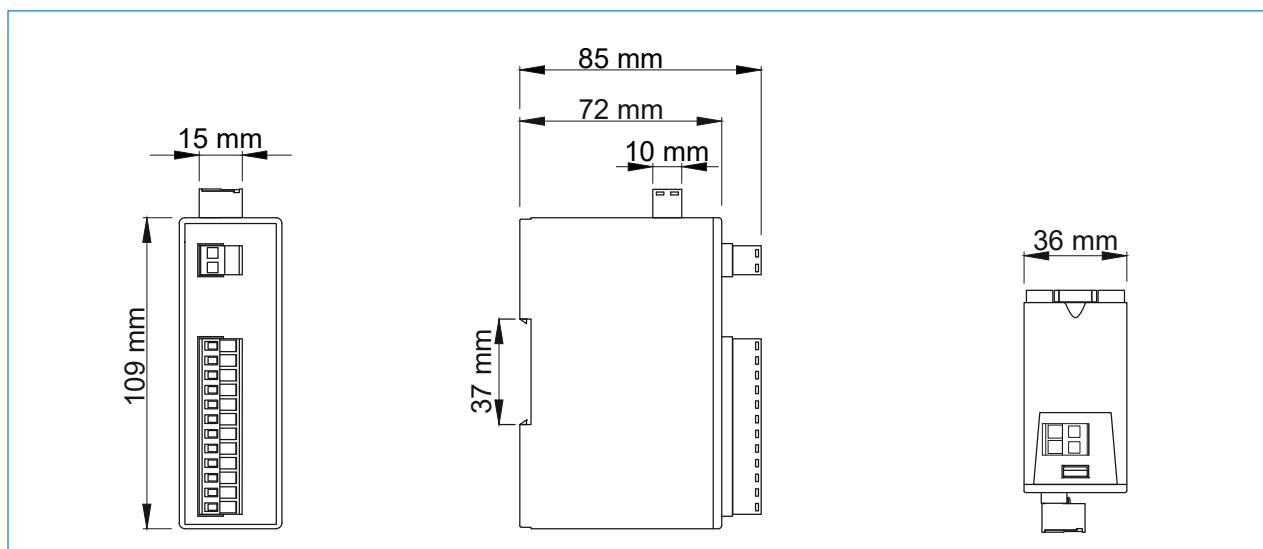

## 1.4. Connection Diagram

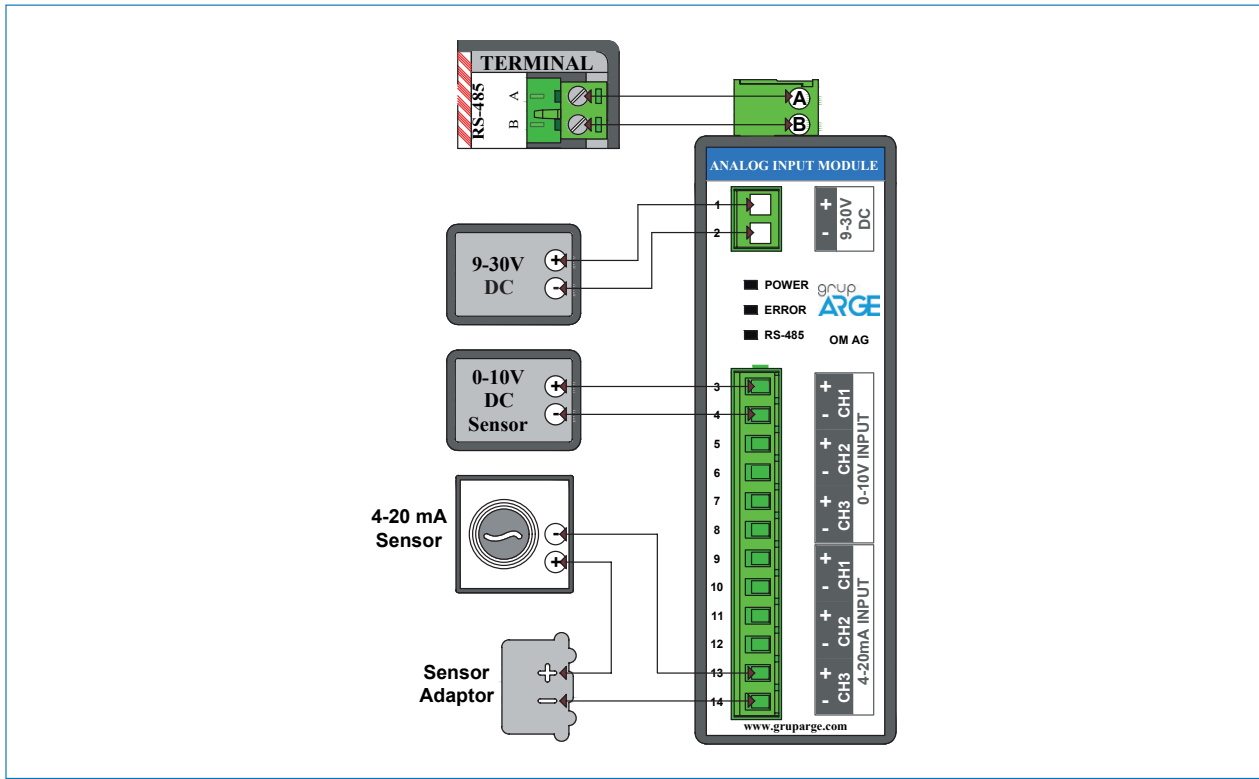

It is recommended to select the cable for RS-485 communications according to the table below.

| Cable Distance | Recommended Cable                        | Alternative Recommendation |
|----------------|------------------------------------------|----------------------------|
| Up to 30 m     | 3*0,22 Shielded and Twisted Signal Cable | CAT-5 Ethernet Cable       |
| Over 30 m      | 3*0,50 Shielded and Twisted Signal Cable | CAT-6 Ethernet Cable       |

## 2. MODBUS MAP

### 2.1. Modbus Map

- The parameters that the user can read, write and clear are shown in the table below. In the R/W/C column in the table;
- R → The parameter can be read,
- W → The parameter can be wrote,
- C → Indicates that the parameter can be cleared.

NOTE: A parameter can have more than one property at the same time.

E.g; R/W in column If written, it indicates that the parameter can be both read and written.

| MODBUS MAP                                          |               |      |            |             |       |
|-----------------------------------------------------|---------------|------|------------|-------------|-------|
| Analog Input Module                                 |               |      |            |             |       |
| INPUT REGISTER                                      |               |      |            |             |       |
| PARAMETRE NAME                                      | ADDRESS (dec) | UNIT | MULTIPLIER | DATA TYPE   | R/W/C |
| Serial Number                                       | 998           | -    | -          | 32 Bit Long | R     |
| 1. Channel – Analog Input Value                     | 1000          | -    | 0,01       | 16 Bit Int  | R     |
| 2. Channel – Analog Input Value                     | 1001          | -    | 0,01       | 16 Bit Int  | R     |
| 3. Channel – Analog Input Value                     | 1002          | -    | 0,01       | 16 Bit Int  | R     |
| 4. Channel – Analog Input Value                     | 1003          | -    | 0,01       | 16 Bit Int  | R     |
| 5. Channel – Analog Input Value                     | 1004          | -    | 0,01       | 16 Bit Int  | R     |
| 6. Channel – Analog Input Value                     | 1005          | -    | 0,01       | 16 Bit Int  | R     |
| HOLDING REGISTER                                    |               |      |            |             |       |
| PARAMETER NAME                                      | ADDREES (dec) | UNIT | MULTIPLIER | DATA TYPE   | R/W/C |
| Serial Number                                       | 100           | -    | -          | 32 Bit Long | R     |
| Product (Type, Sub-Type)                            | 102           | -    | -          | 16 Bit Int  | R     |
| Application Version (Main,Sub)                      | 103           | -    | -          | 16 Bit Int  | R     |
| Hardware (0, Type)                                  | 104           | -    | -          | 16 Bit Int  | R     |
| Hardware Version (Main, Sub)                        | 105           | -    | -          | 16 Bit Int  | R     |
| Parameter Version                                   | 106           | -    | -          | 16 Bit Int  | R     |
| System Version (Main,Sub)                           | 107           | -    | -          | 16 Bit Int  | R     |
| Modbus Address [1:254]                              | 206           | -    | -          | 16 Bit Int  | R/W   |
| Bus Speed [0:1200, 1:2400, 2:4800, 3:9600, 4:19200] | 207           | Bps  | -          | 16 Bit Int  | R     |

## 2.2. Communication Parameters

|                  |          |
|------------------|----------|
| <b>Baudrate</b>  | 9600 bps |
| <b>Data Bits</b> | 8        |
| <b>Parity</b>    | None     |
| <b>Stop Bits</b> | 1        |

NOTE: The default Modbus address is the number obtained by adding 100 to the last two digits of the serial number of the device. For example, suppose the serial number is 185247. Since it ends with 47, Modbus address becomes 147.

## 2.3. Modbus Speed

Modbus speed is determined by indexes between 0-4. The table below contains Modbus speeds according to the indexes. By adjusting the Bus Speed part of the Modbus map, the desired speed can be obtained from the table below.

|                           |      |      |      |      |       |
|---------------------------|------|------|------|------|-------|
| <b>Index</b>              | 0    | 1    | 2    | 3    | 4     |
| <b>Modbus Speed (Bps)</b> | 1200 | 2400 | 4800 | 9600 | 19200 |